

MEZO KM-3

The diagram shows an exploded view of the MEZO KM-3 desk assembly. Components are labeled with letters and numbers: A (top panel), B1 and B2 (side panels), C (middle panel), D (bottom panel), E and F (inner panels), G (base panel), H1, H2, H3, H4 (connectors), I1 and I2 (vertical supports), J1 and J2 (drawers), K1 through K6 (corner brackets), L1 and L2 (drawer runners), M (backrest), N (leg frame), O (leg caps), and P1 through P21 (hardware). Arrows indicate the assembly direction.

| | | |
|-----|-------------|------------------------------|
| P1 | | 22 |
| P2 | | 22 |
| P3 | M5X40mm | 26 |
| P4 | M4X35mm | 16 |
| P5 | CL DL DR SR | 4xCL 4xDL 4xDR 4xCR |
| P6 | M3.5X12mm | 52 |
| P8 | Ø6X30mm | 20 |
| P9 | Ø6X30mm | 8 |
| P10 | M4X18MM | 3 |
| P11 | | 1 |
| P12 | | 2 |
| P13 | | 2 |
| P14 | M6X35MM | 8 |
| P15 | M6X40MM | 4 |
| P16 | | 1 |
| P17 | M3X14MM | 2 |
| P18 | | 1 |
| P19 | M3X10mm | 2 |
| P20 | | 2 |
| P21 | | 10 |

HALMAR Sp. z o.o.
 ul. Centralnego Okręgu Przemysłowego 2, 37-450 Stalowa Wola, POLSKA / POLAND
 tel. +48 15 843 28 10, fax: +48 15 842 19 57, e-mail: office@halmar.com.pl