


# USER MANUAL FOR DRAINER

## Push Button Basin Waste

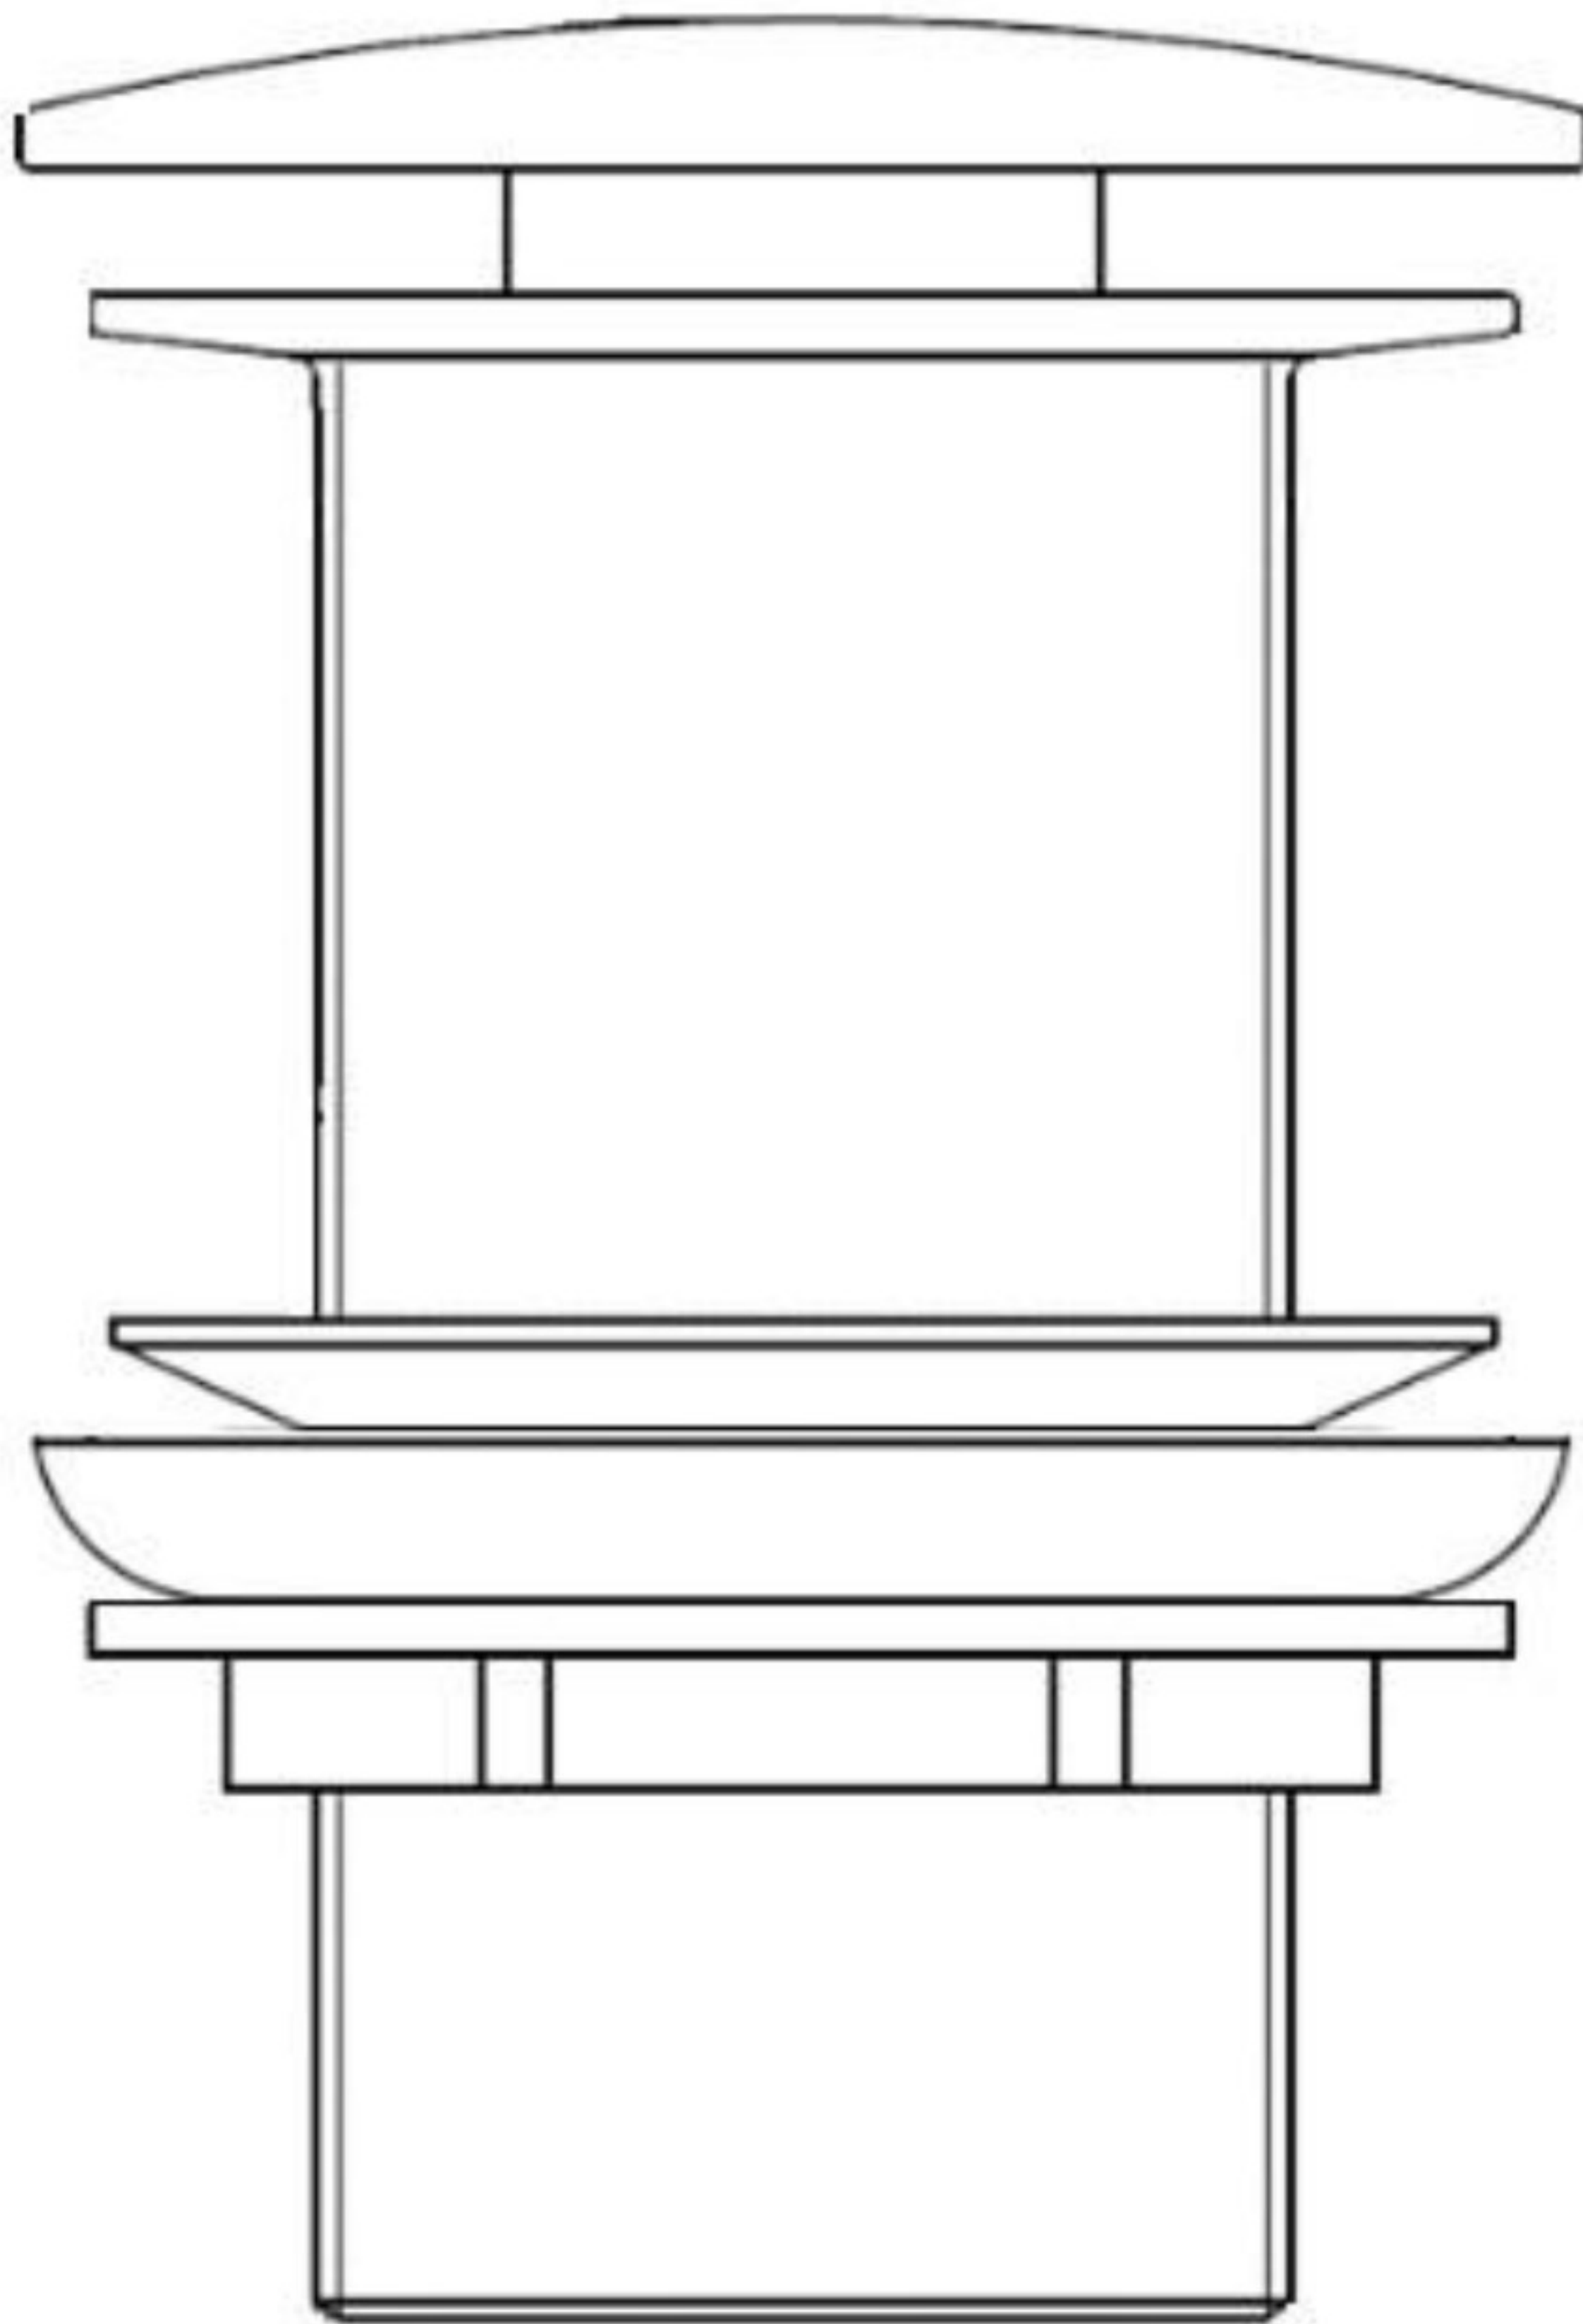

Please note: Image is for illustrative purposes only and may differ slightly to the actual product

- **Single-person assembly**
- **Tools required**
- **We always recommend using professional tradespeople to install your product**

### Important information

- Please read these instructions thoroughly and retain for future reference



# Parts

1 x Plug mechanism


1 x Waste Body

2 x Rubber washer (seals)

1 x Nut

# Tools required

Silicone and adjustable grips

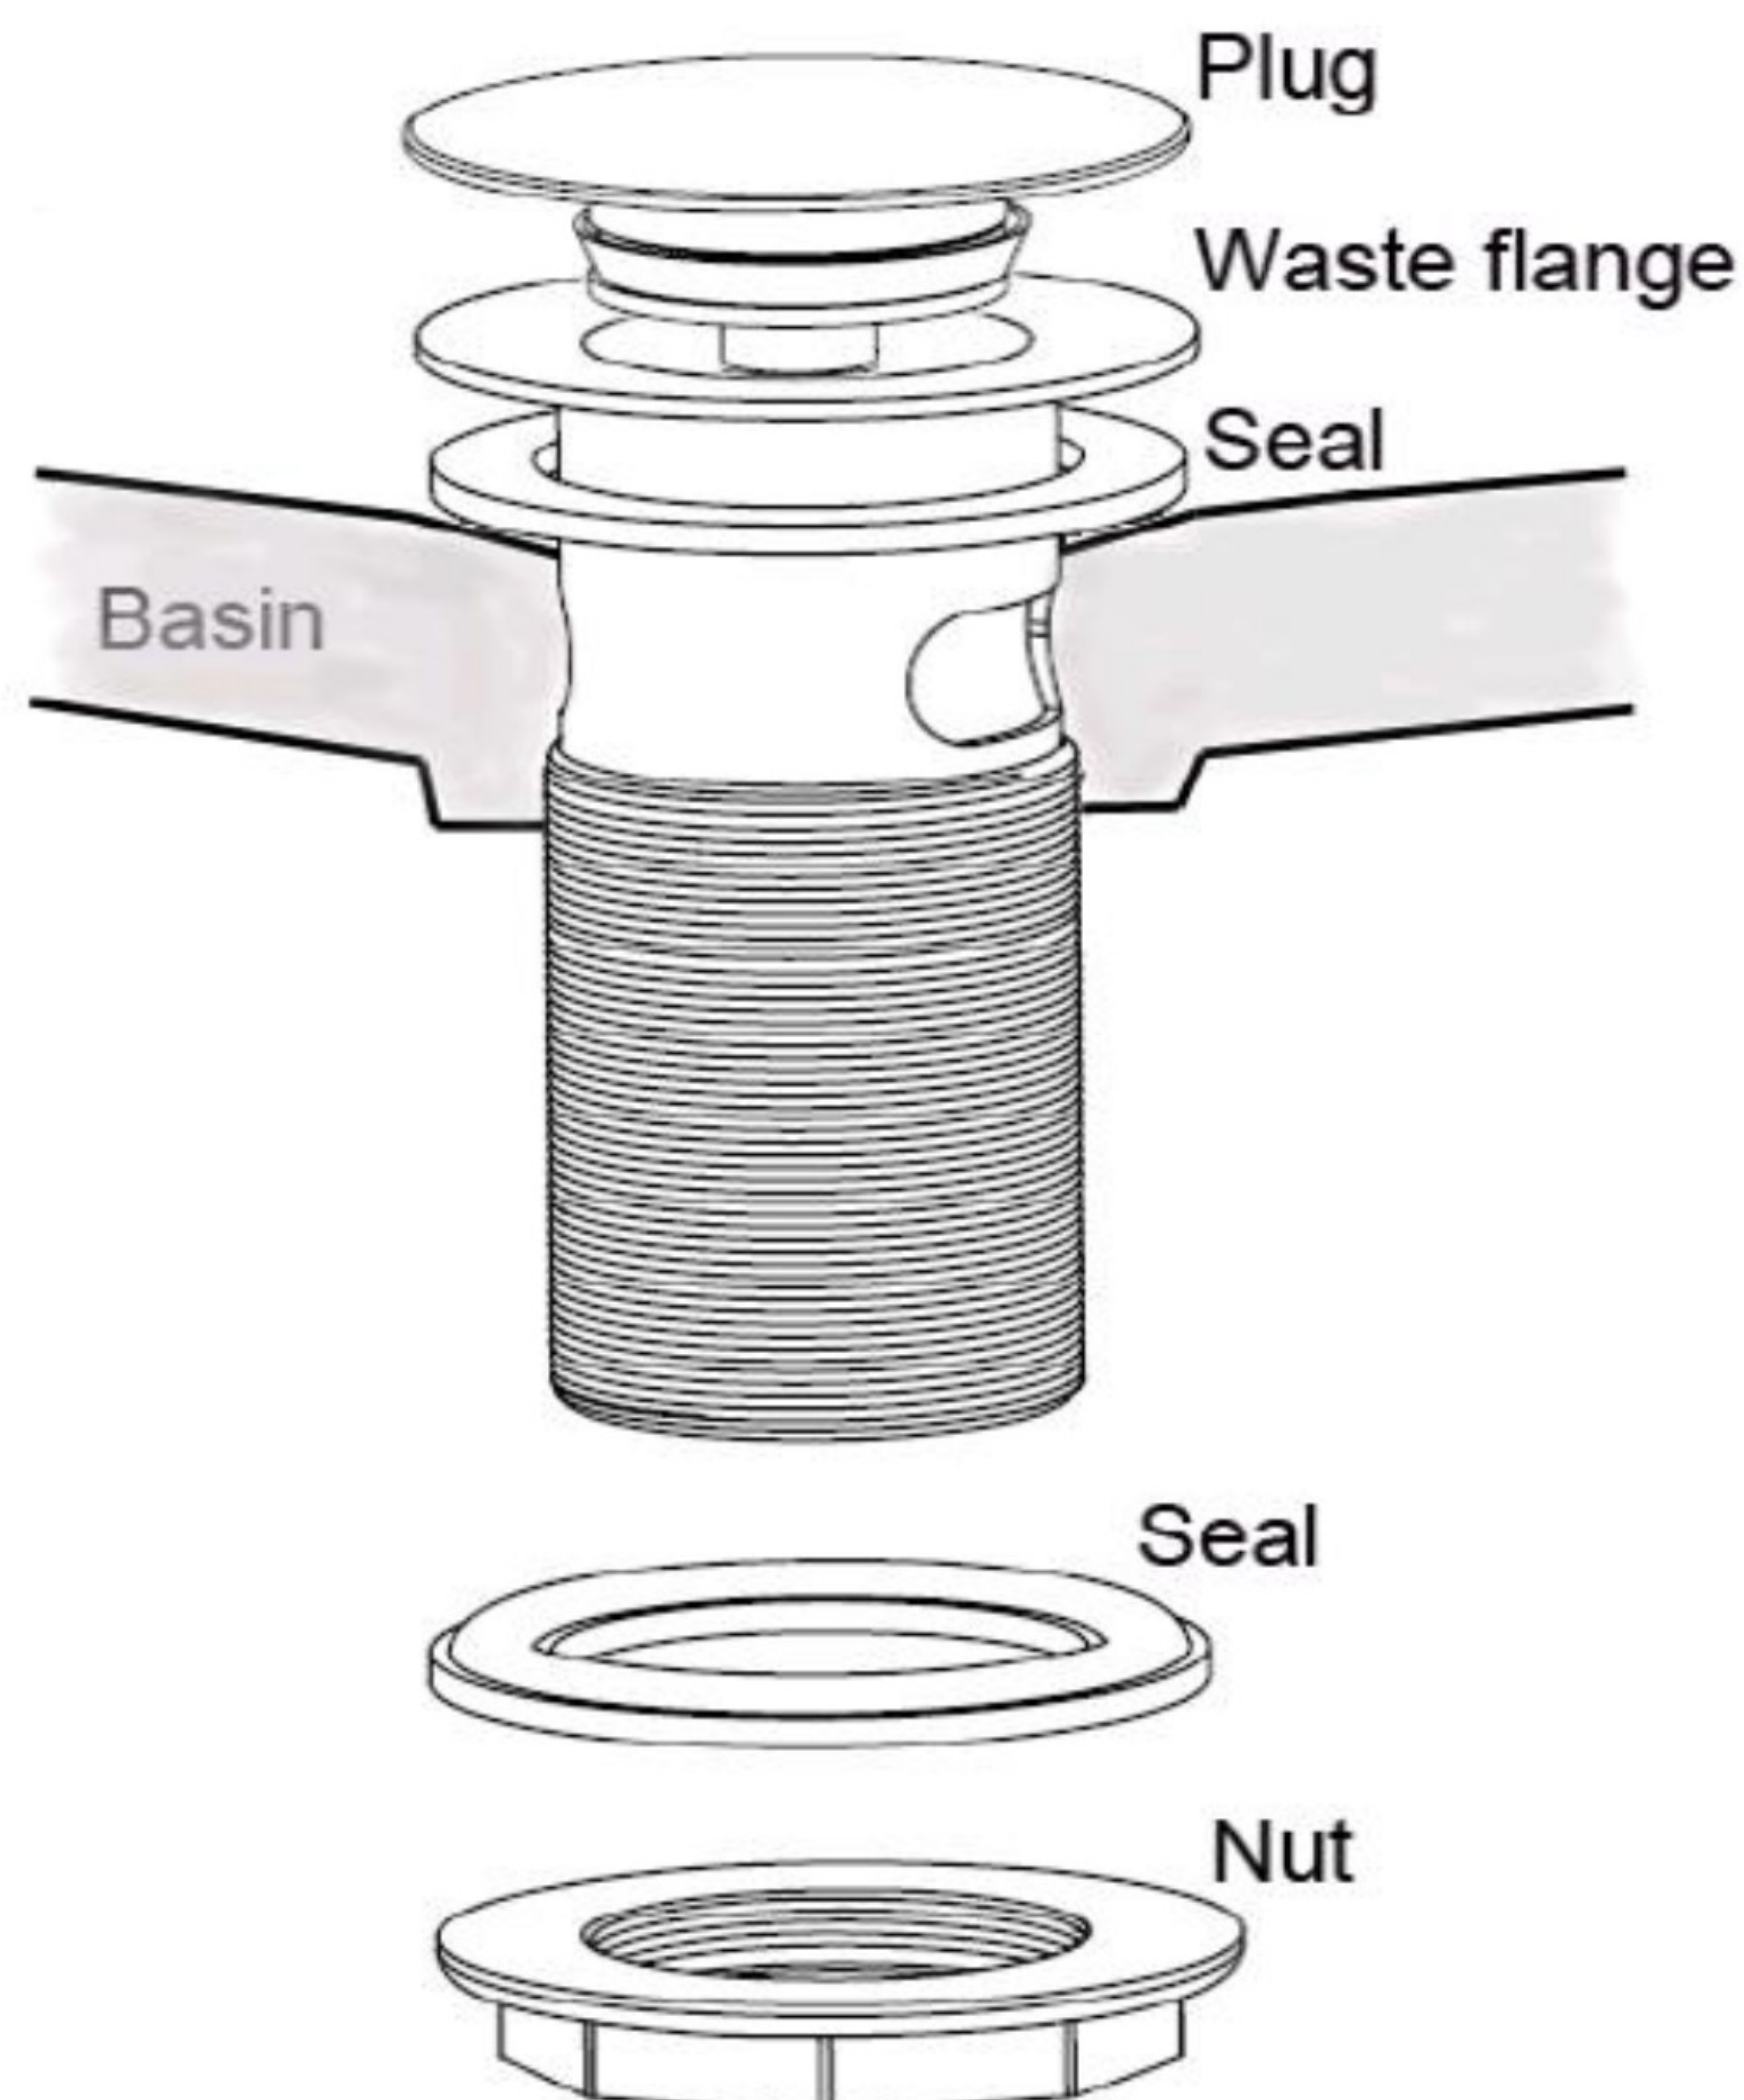

Please note: Parts are for illustrative purposes only and may differ slightly to the actual product

# Installation

1. Upon receipt of your product, remove the nut and bottom seal from the waste body.
2. Place the waste and top seal into the basin and push the waste body through the basin waste hole.  
  
(The top washer does not have to be used, this can be replaced by applying silicone sealant between the waste flange and basin).
3. From underneath the basin, place the bottom seal onto the threaded tail, followed by the nut.
4. Tighten the nut to the underside of the basin and finish using adjustable grips, do not overtighten.

(Silicone sealant can also be used in conjunction with the nut to create the seal)



# Cleaning

To maintain the surface of your product, wipe with a clean damp cloth and wipe dry, do not use any abrasive cleaning agents or materials.

If any harsh chemicals come into contact with the surface of the product, rinse and wipe clean immediately.

# Troubleshooting

## Water draining

Check the plug/mechanism is fully screwed into the waste body. Then, check the plug seal to ensure it has not been damaged. Replace if damaged.

## Plug/mechanism does not click open/closed

Remove the plug and replace the spring mechanism.

# Maintenance

- If the plug needs to be replaced, unscrew it from the spring mechanism, and refit with a new one, ensuring that the plug is fully secured.
- If the spring mechanism needs to be replaced, unscrew the plug, then unscrew the spring mechanism from the waste body; a small spanner or pliers may be required to assist, then refit ensuring that the spring mechanism is fully secured.
- If the Plug Seal should need to be removed, unscrew the plug from the spring mechanism then pull the seal from the plug stem and refit the seal ensuring it's not twisted, proceed to refit the plug.

