 
 
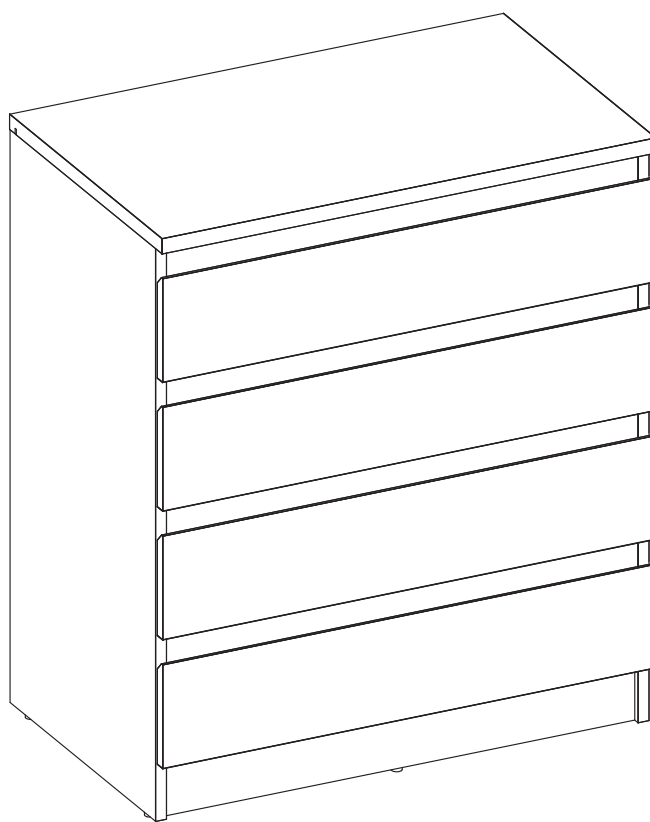 
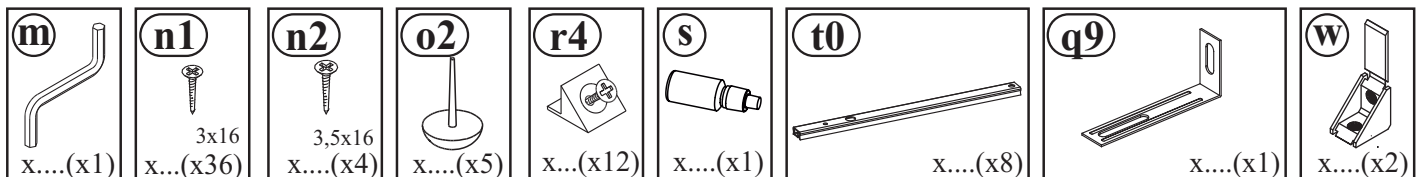 
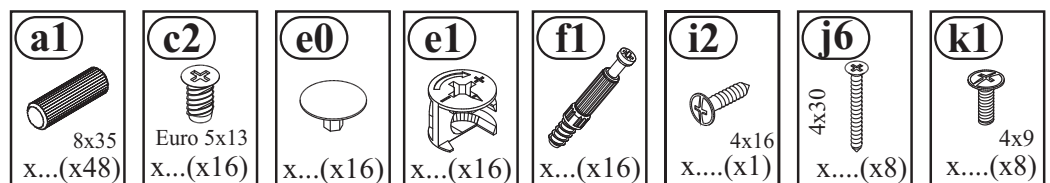 


INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITÍ / MONTÁŽNÍ INSTRUKCE
ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ

 
 
 
 
 
 
 
 
 
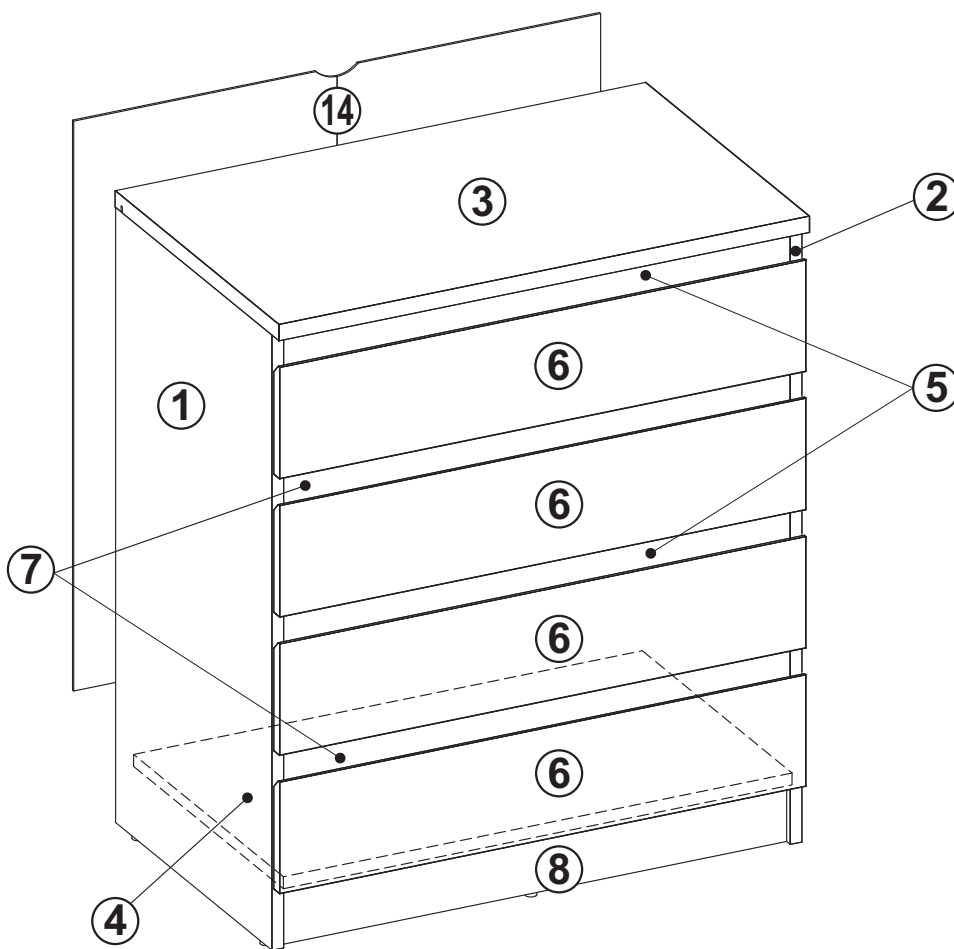 


OKUCIA SĄ W PACZCE NR 1. / KOVANIE KTORÉ SA NÁCHADZA V SKRINKE NR 1.
KOVÁNÍ OBSAŽENÉ V BALENÍ NR 1. / ФУРНИТУРА, НАХОДЯЩАЯСЯ В УПАКОВКЕ NR 1.
A CSOMAGBAN TALÁLHATÓ BÚTORSZERELVÉNYEK NR 1.

 
INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITIE / MONTÁŽNÍ INSTRUKCE
 ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ

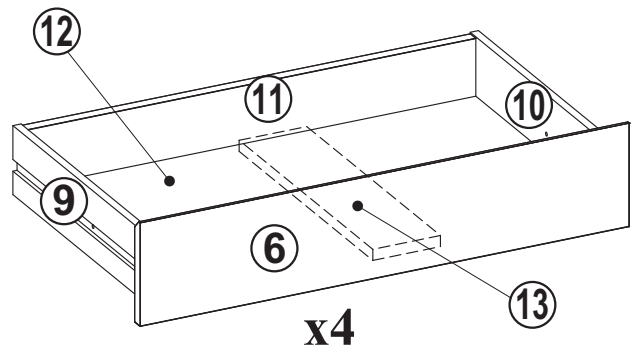


 


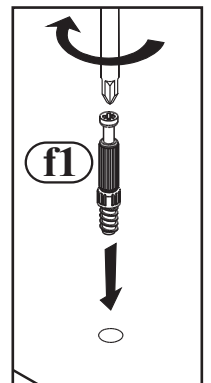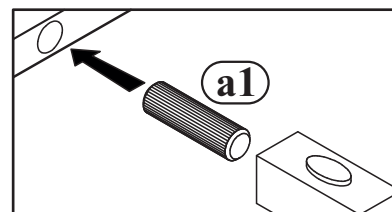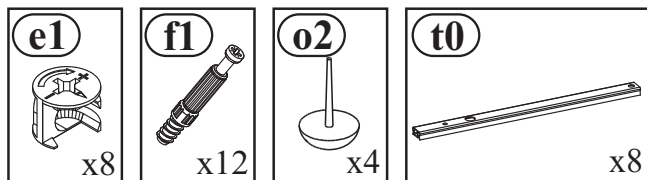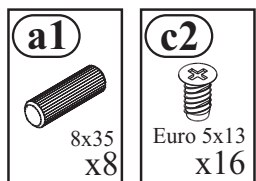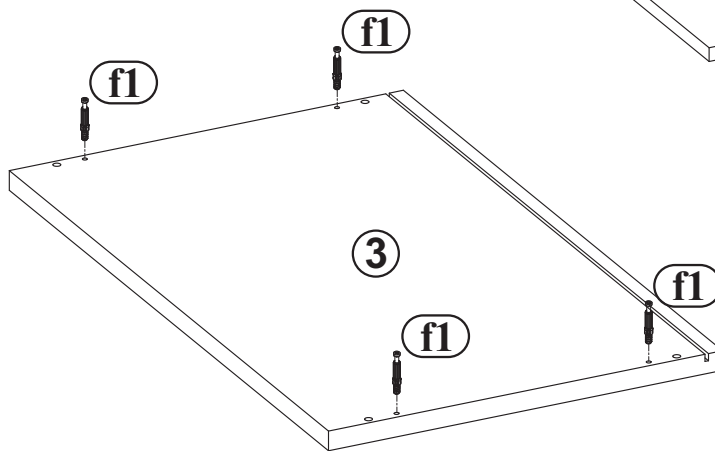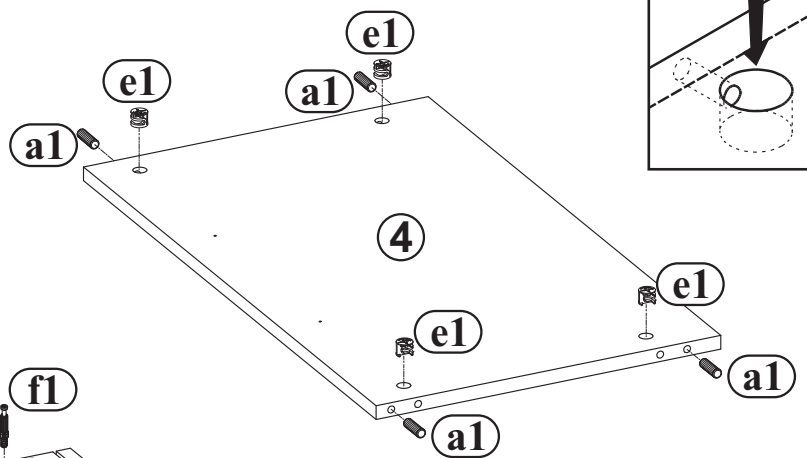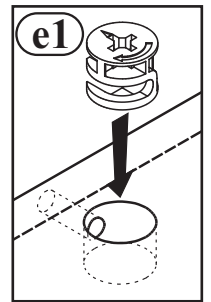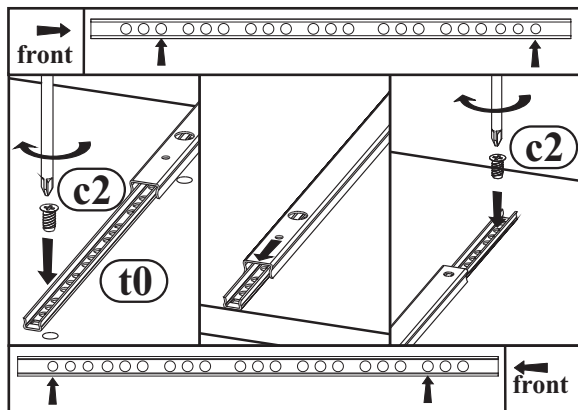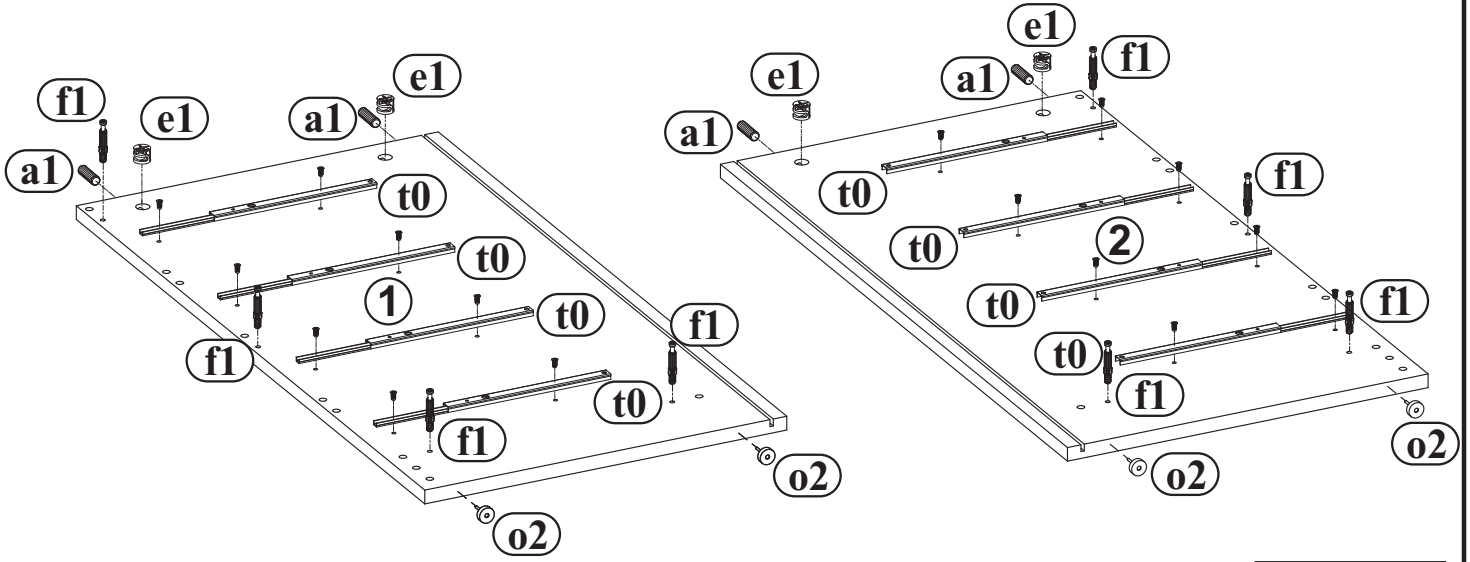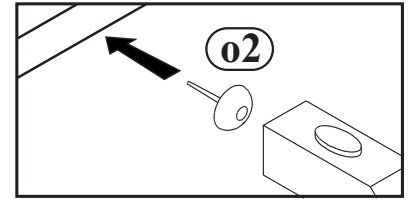
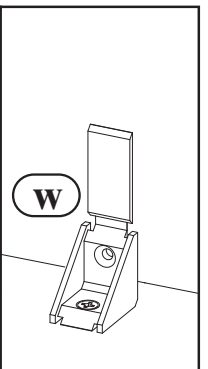 
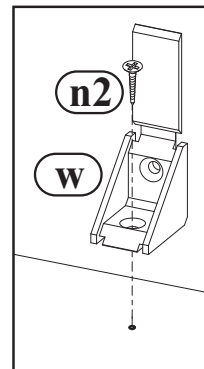 
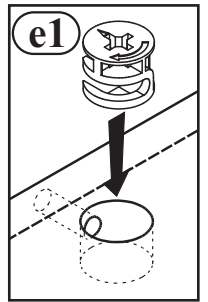 
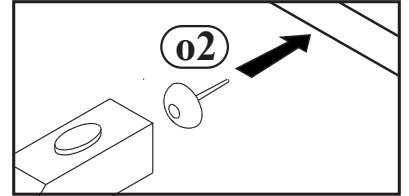 
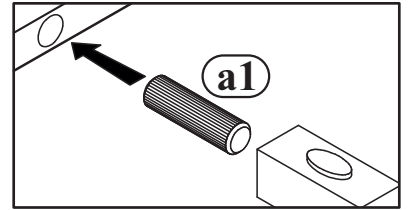 
1

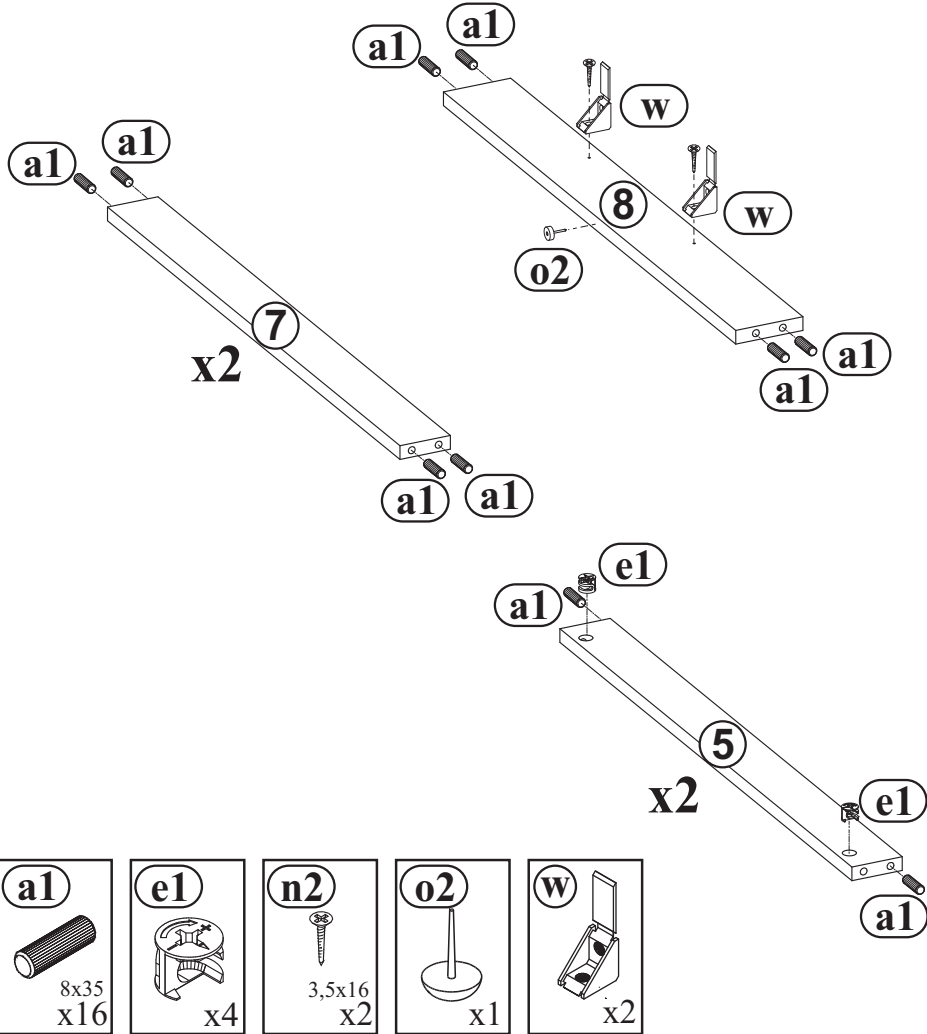

 
 
 
 
2

 


 


 
- 
a1
 8x35
 x16
- 
e1
 x4
- 
n2
 3,5x16
 x2
- 
o2
 x1
- 
w
 x2

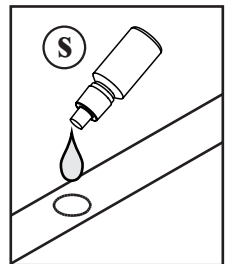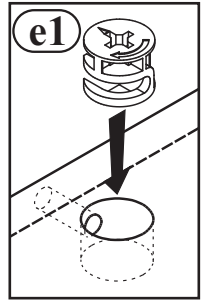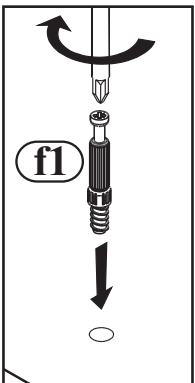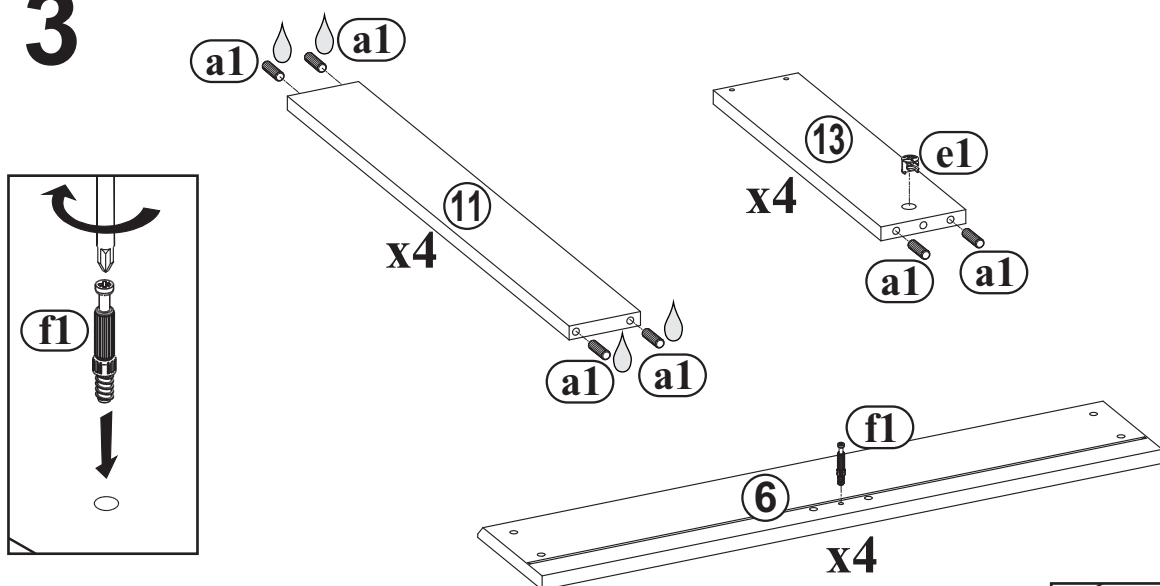

 
 
 
 
 
 
 
 
 
 
 
 
3

 
 
 


- 
a1
 8x35
 x24
- 
e1
 x4
- 
f1
 x4
- 
s
 x1

 
 
 
 
 
 
 
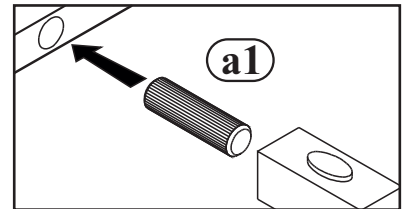 


4

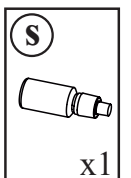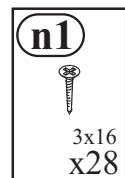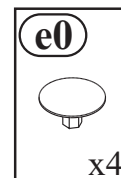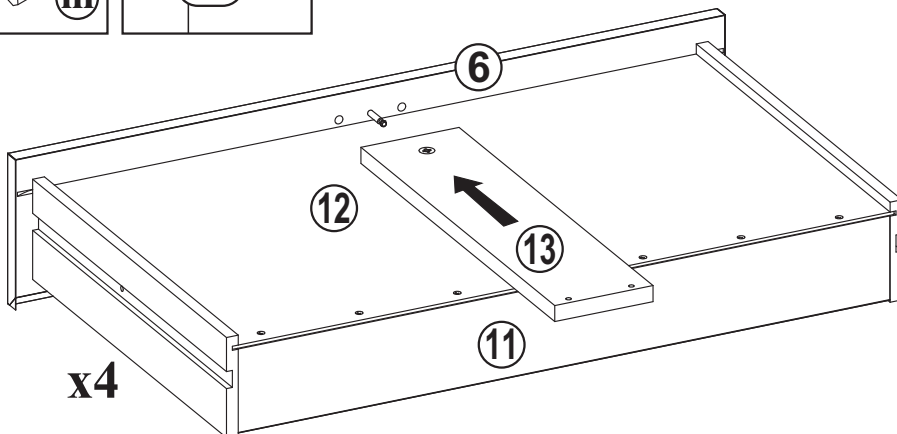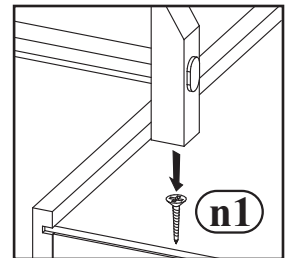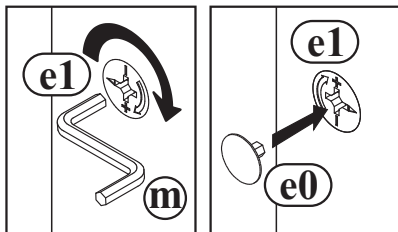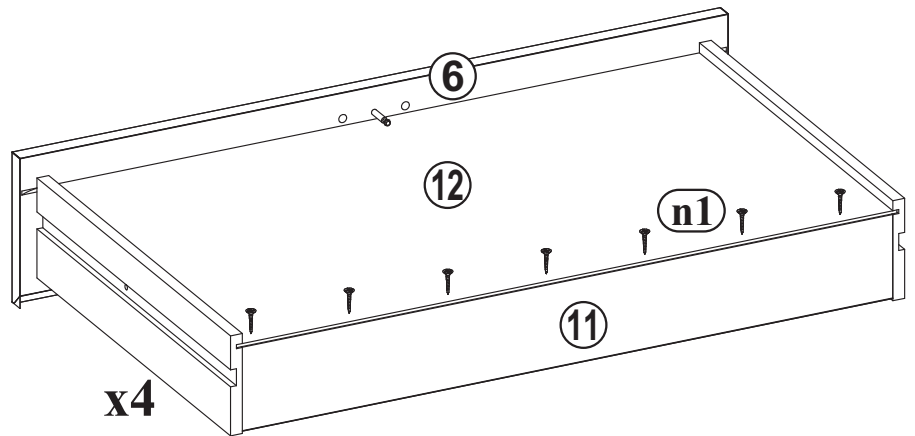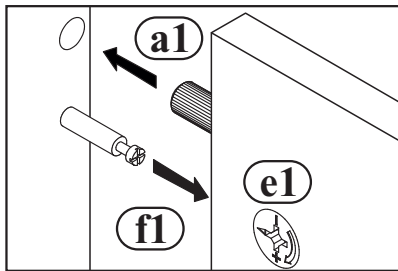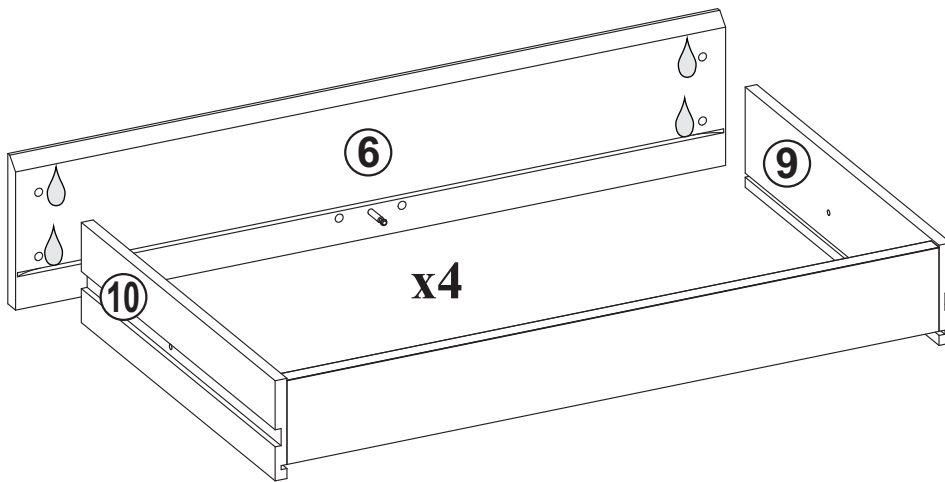 
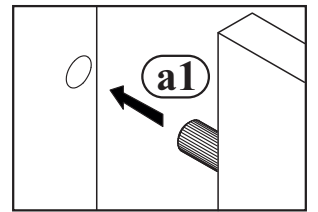 
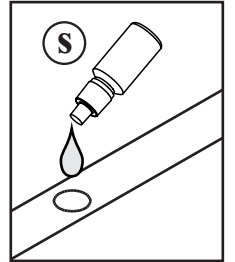 
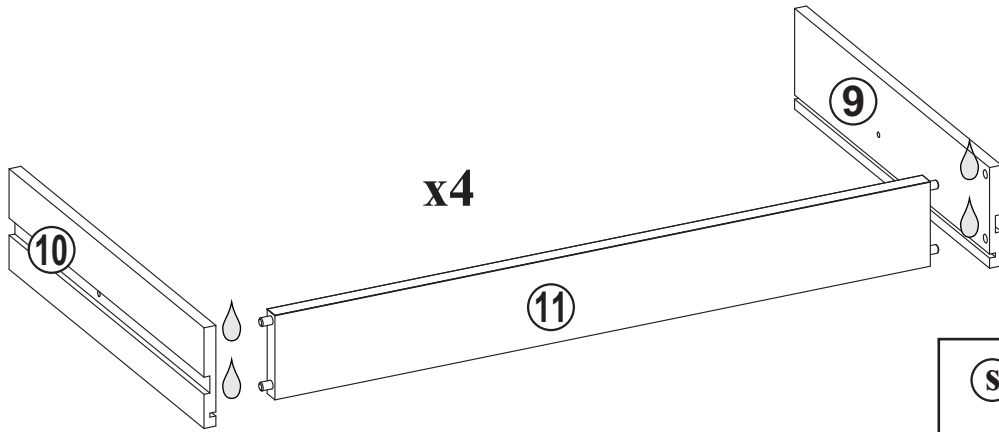 


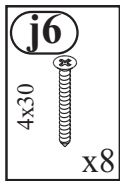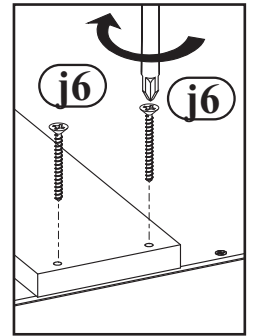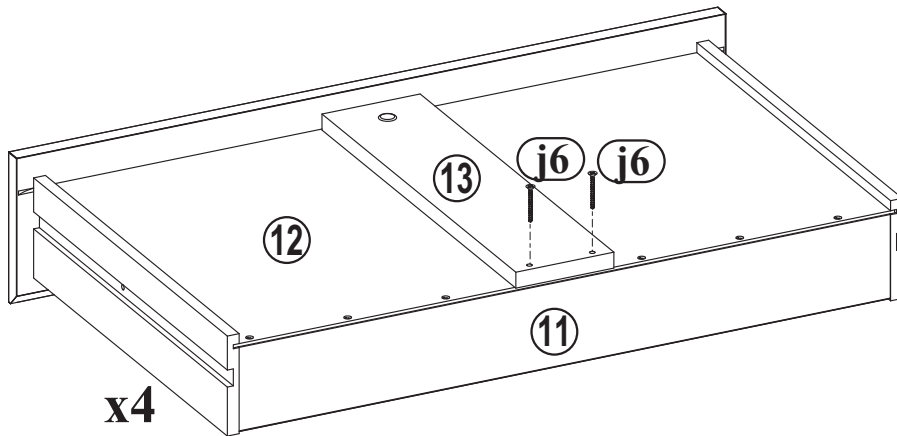

 
 
 
 
5

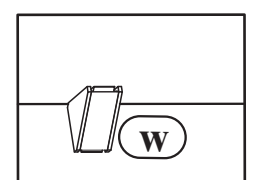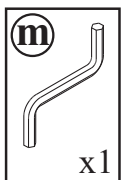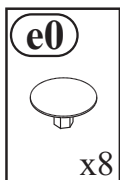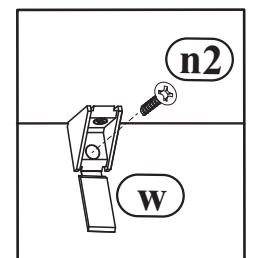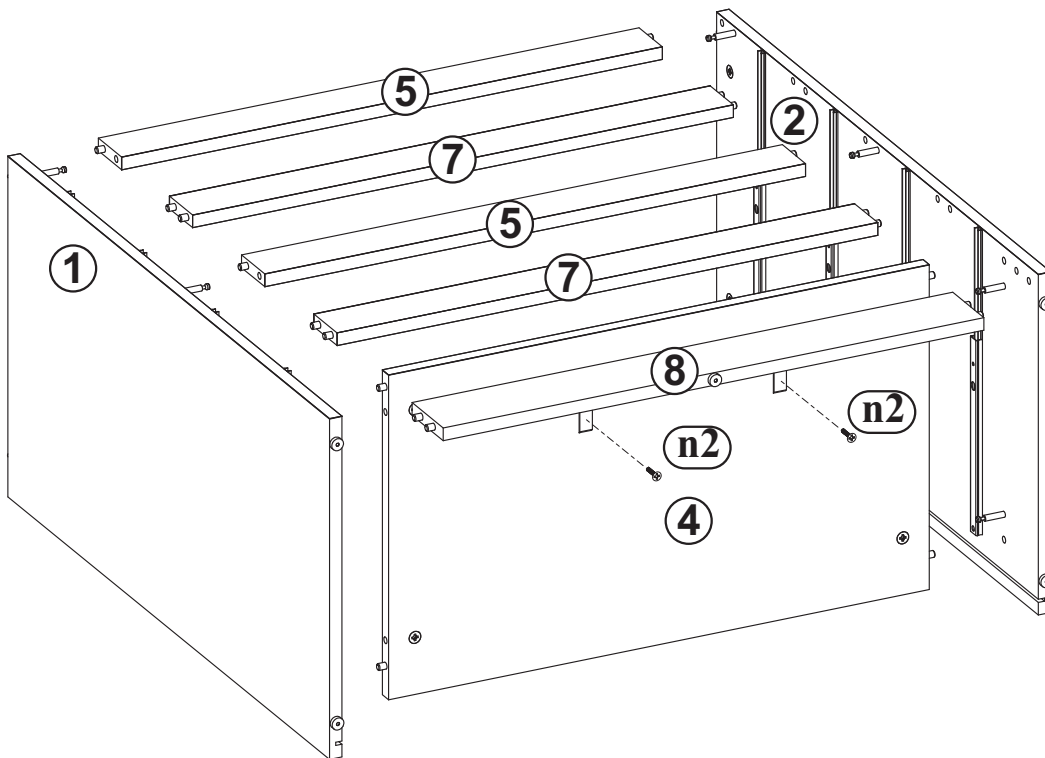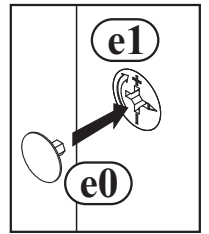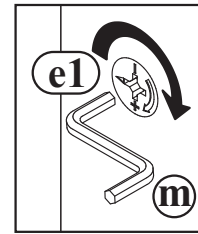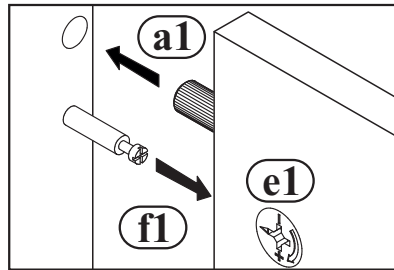

6

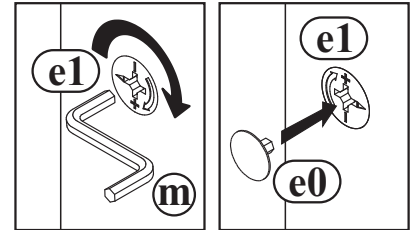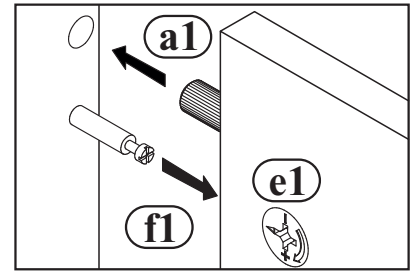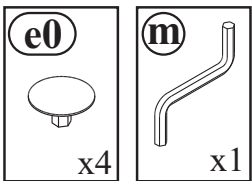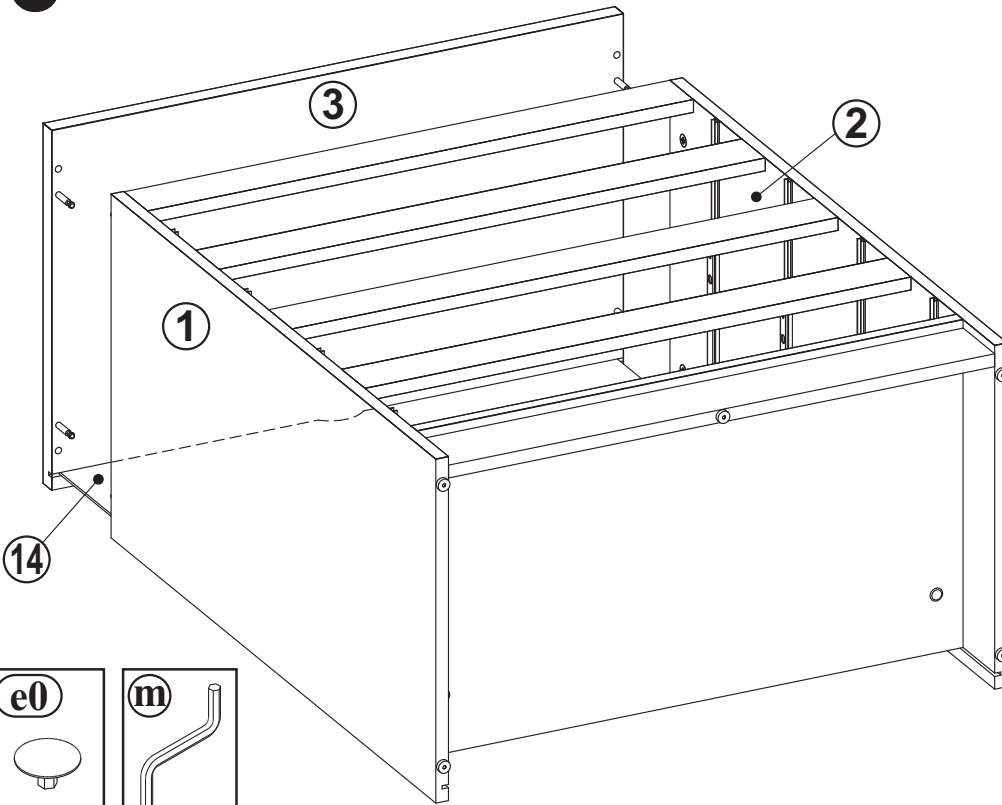

7

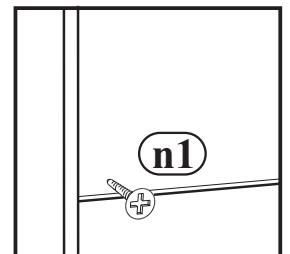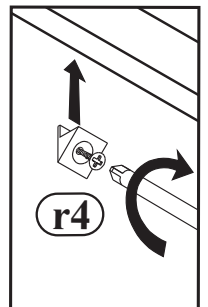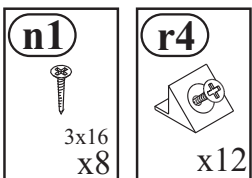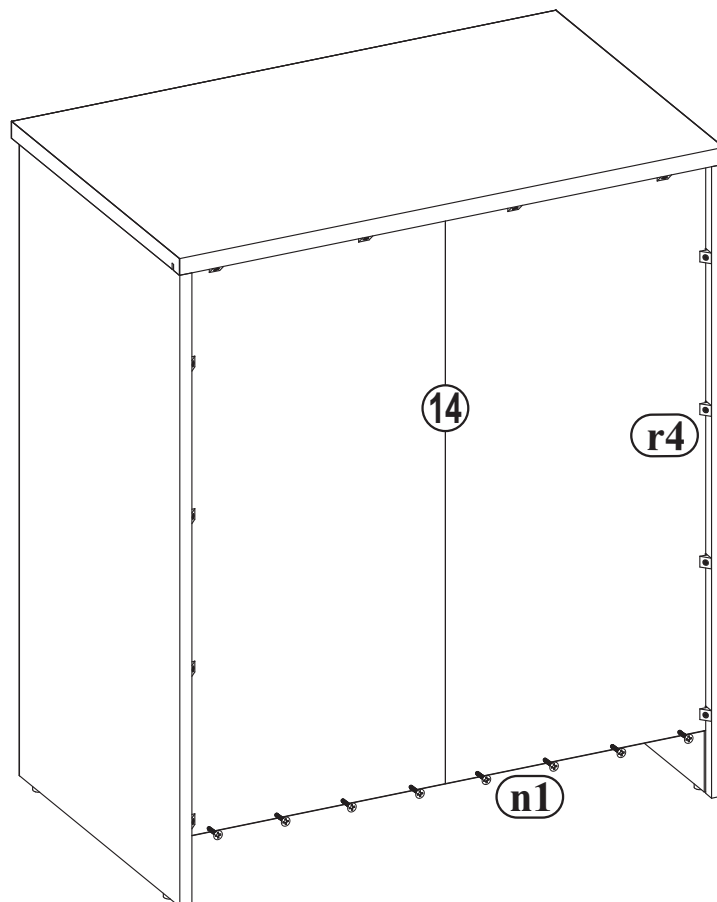

8

