

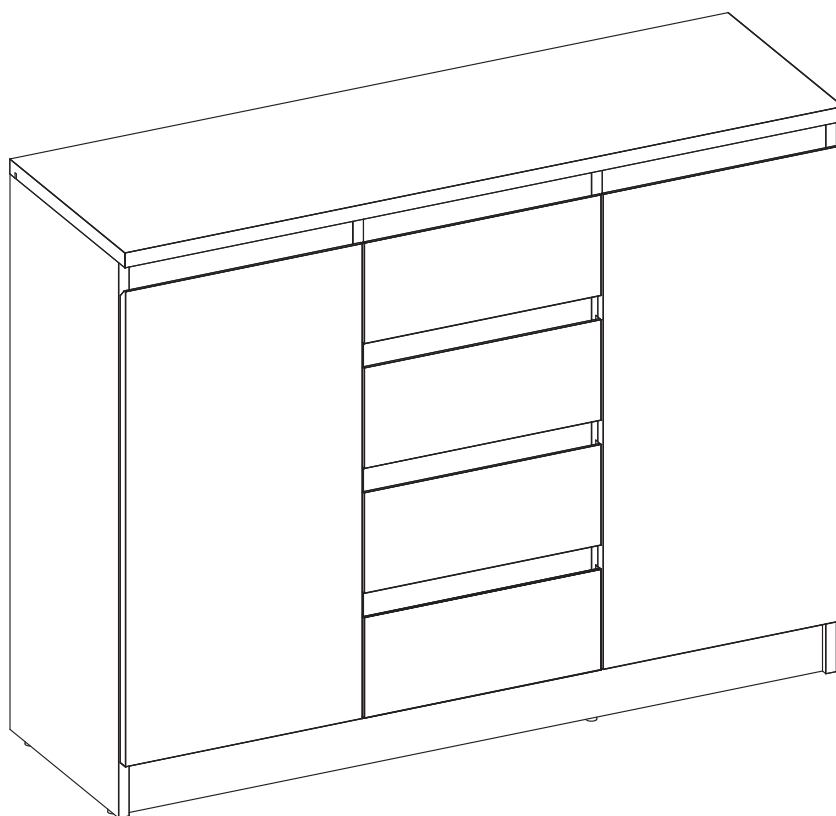
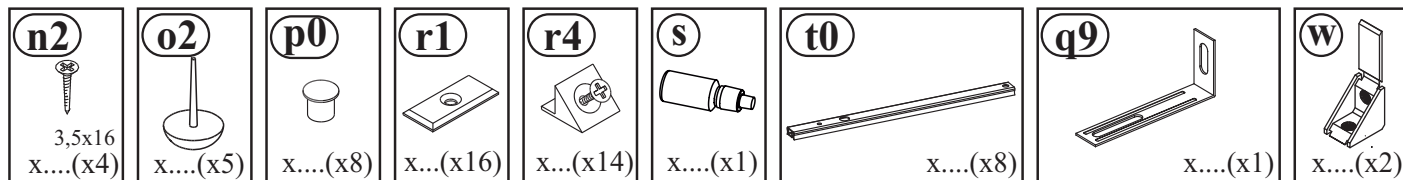
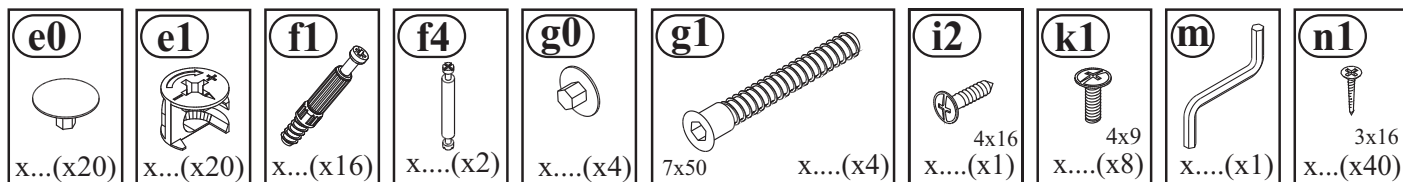


INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITÍ / MONTÁŽNÍ INSTRUKCE
ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ











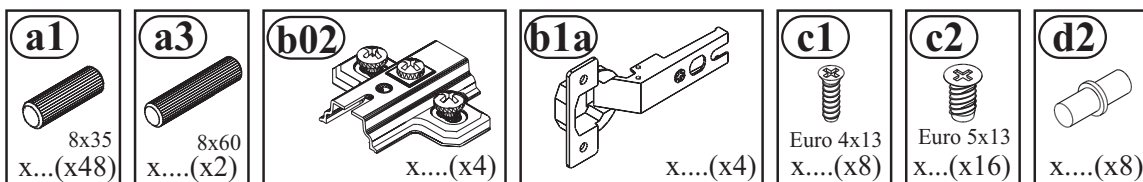


OKUCIA SĄ W PACZCE NR 1. / KOVANIE KTORÉ SA NÁCHADZA V SKRINKE NR 1.
KOVÁNÍ OBSAŽENÉ V BALENÍ NR 1. / ФУРНИТУРА, НАХОДЯЩАЯСЯ В УПАКОВКЕ NR 1.
A CSOMAGBAN TALÁLHATÓ BÚTORSZERELVÉNYEK NR 1.









INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITIE / MONTÁŽNÍ INSTRUKCE
 ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ

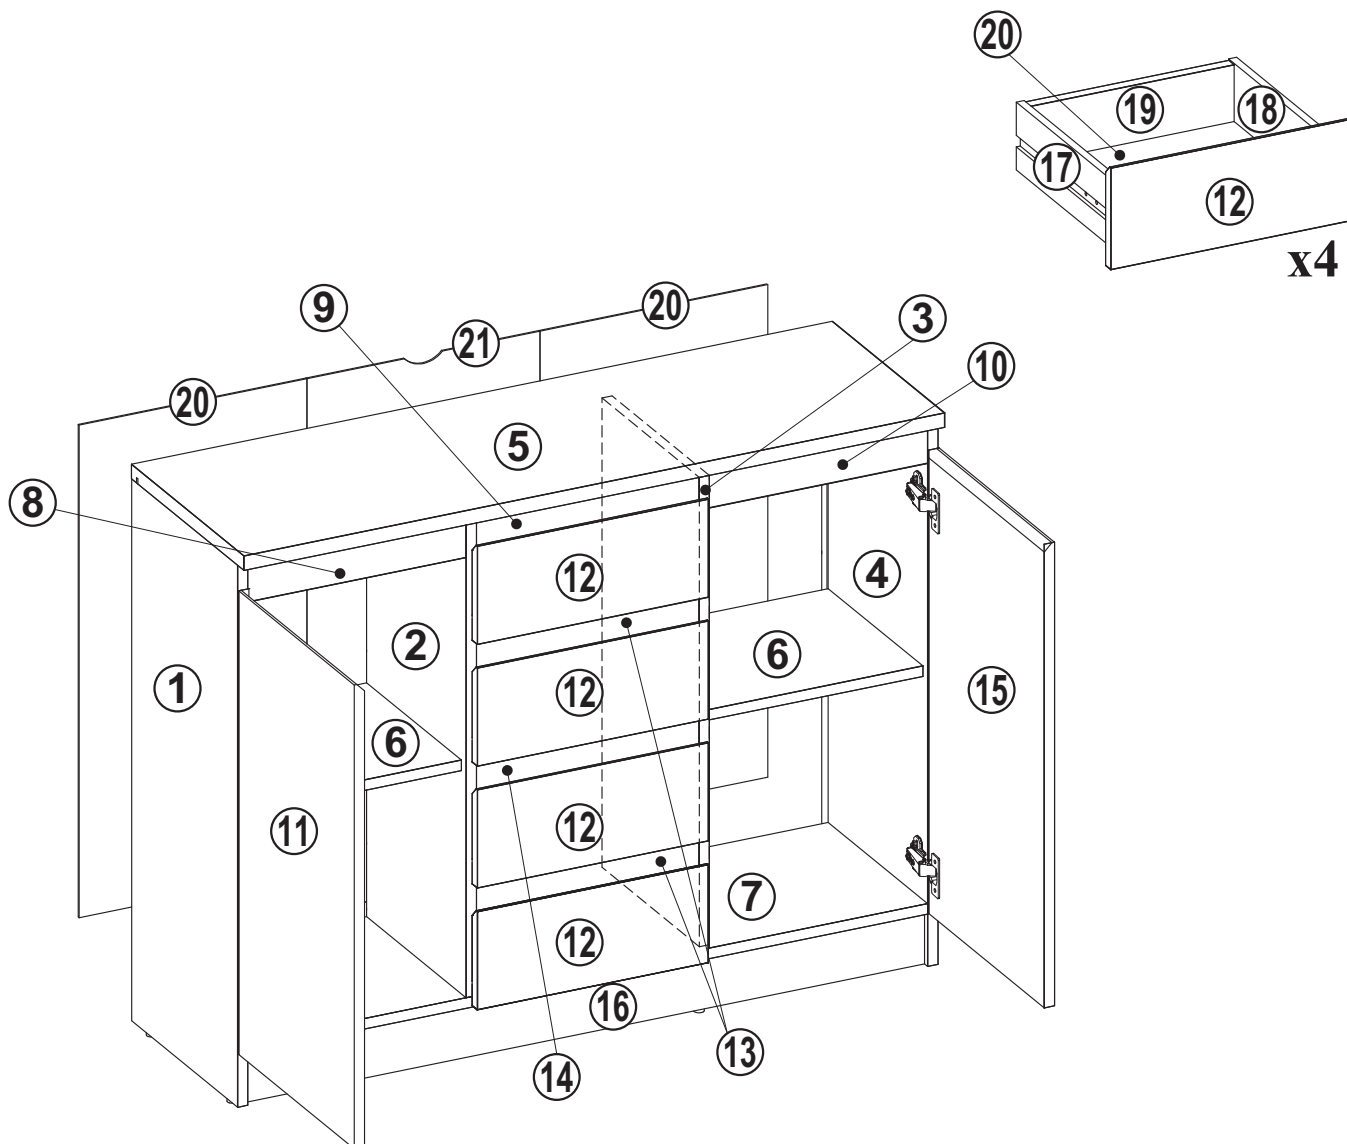

1

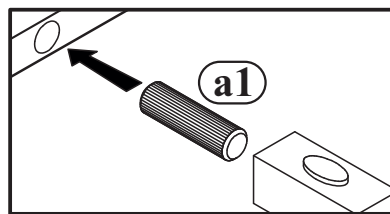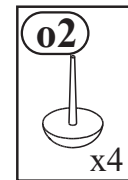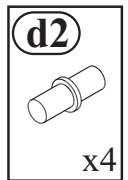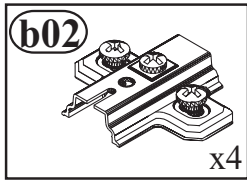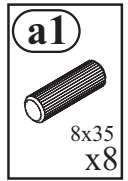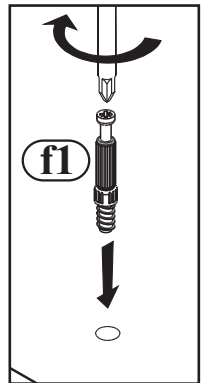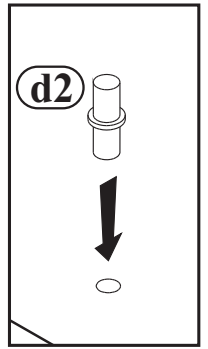
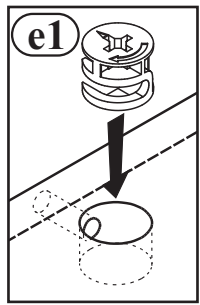
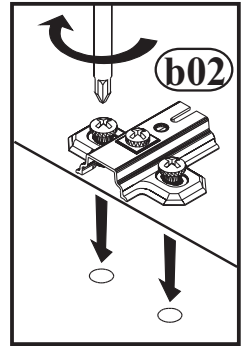
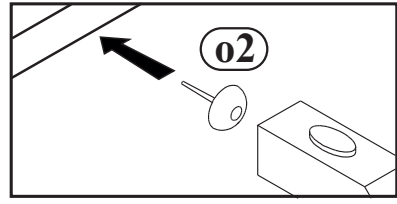
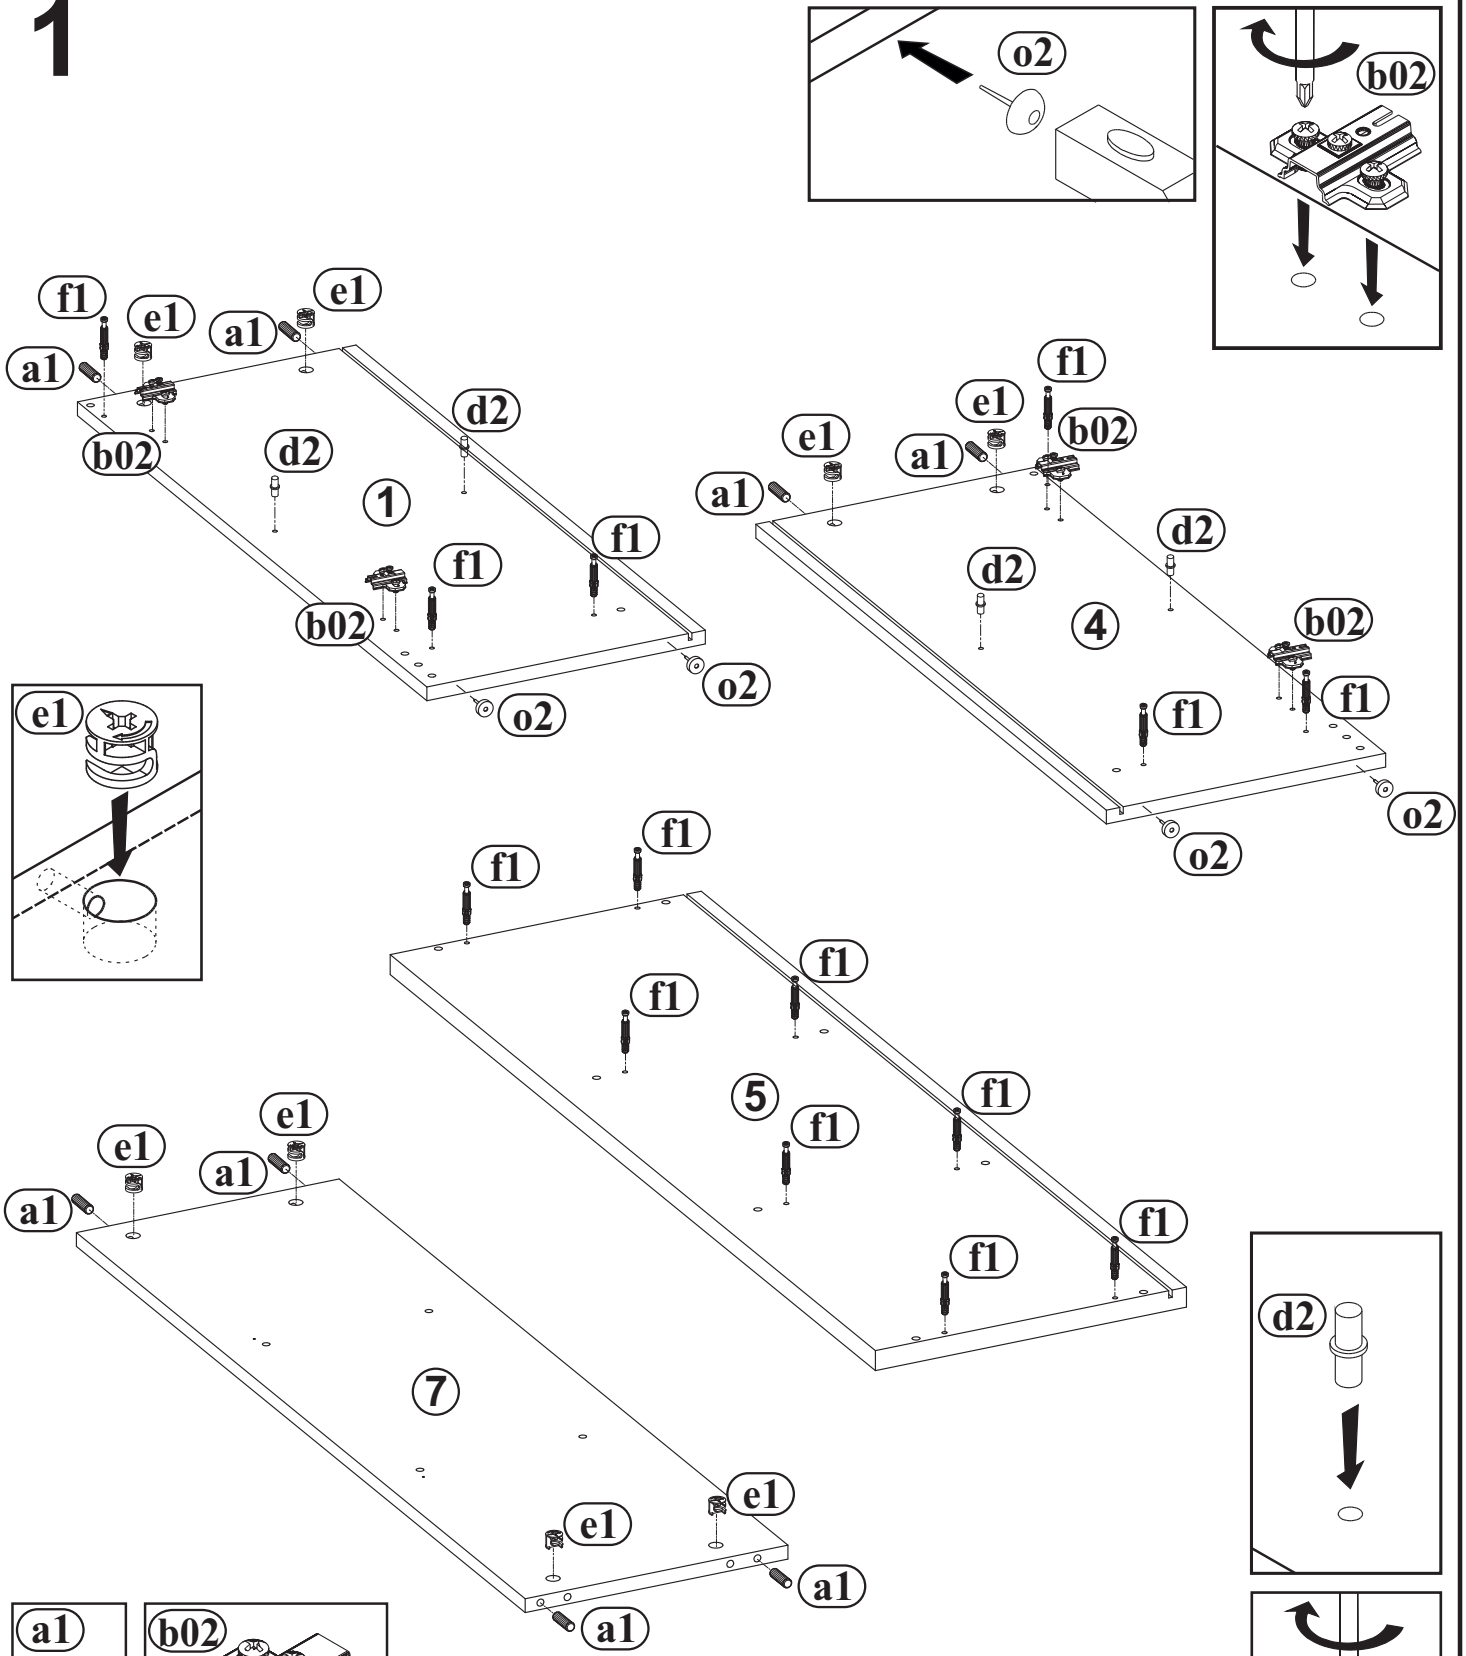


2

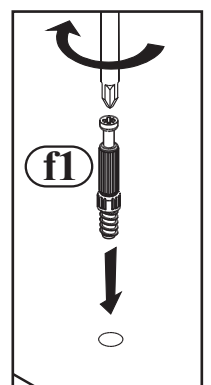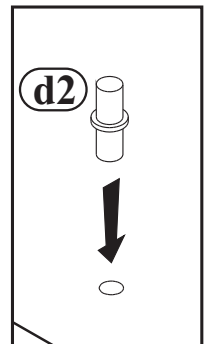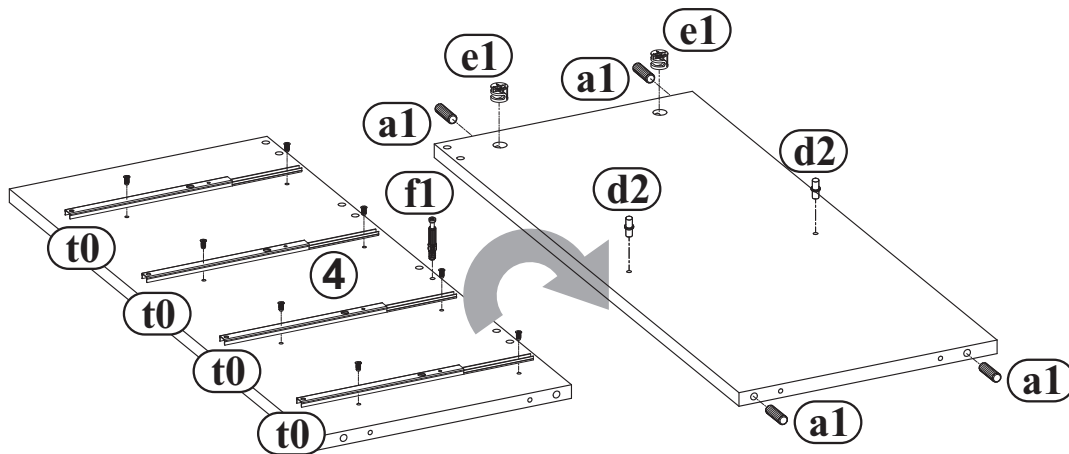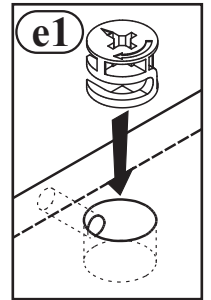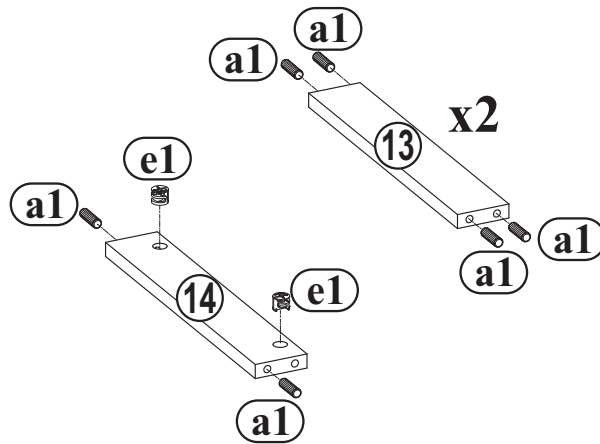
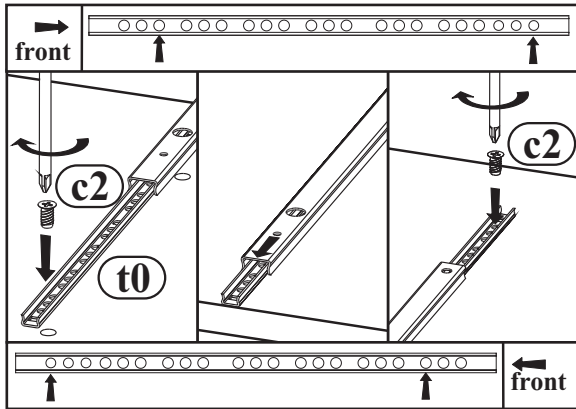
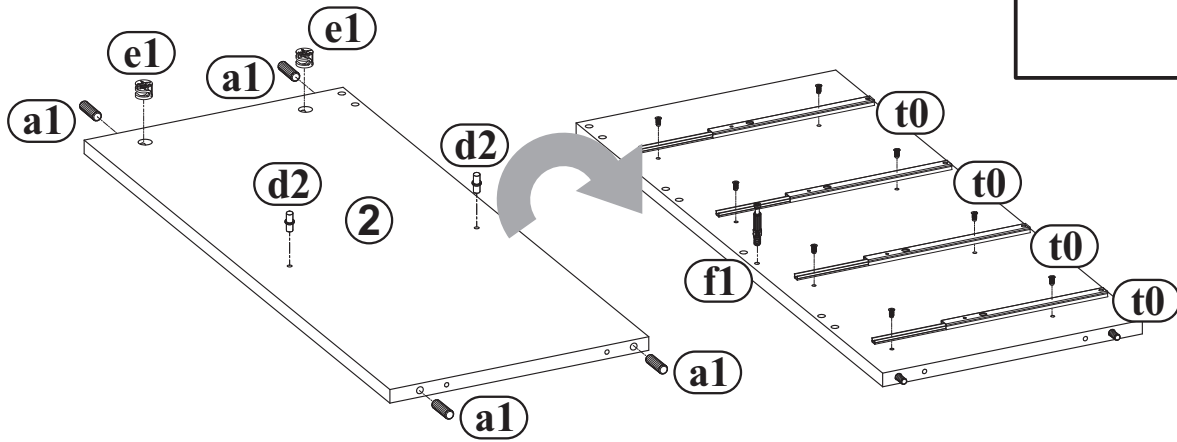
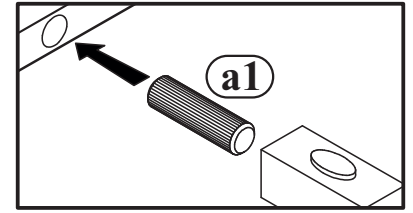


<p>a1 8x35 x18</p>	<p>c2 Euro 5x13 x16</p>	<p>d2 x4</p>	<p>e1 x6</p>	<p>f1 x2</p>	<p>t0 x8</p>
-----------------------------------	--	-------------------------	-------------------------	-------------------------	-------------------------





3

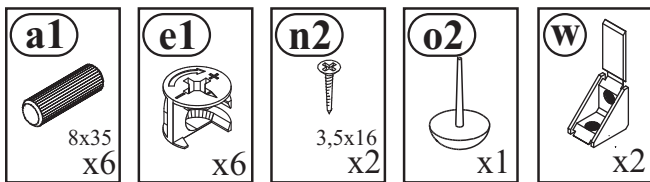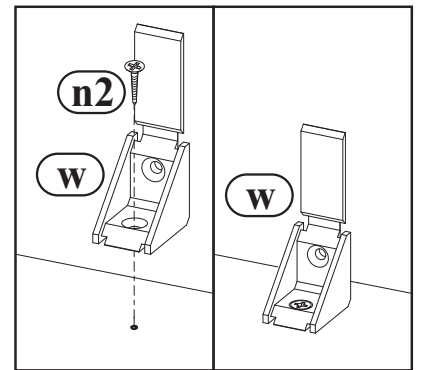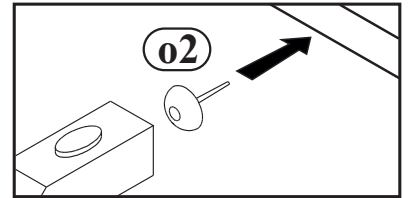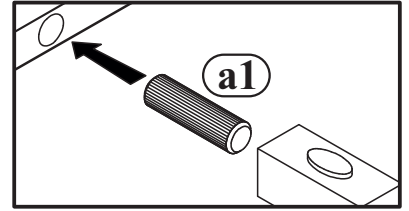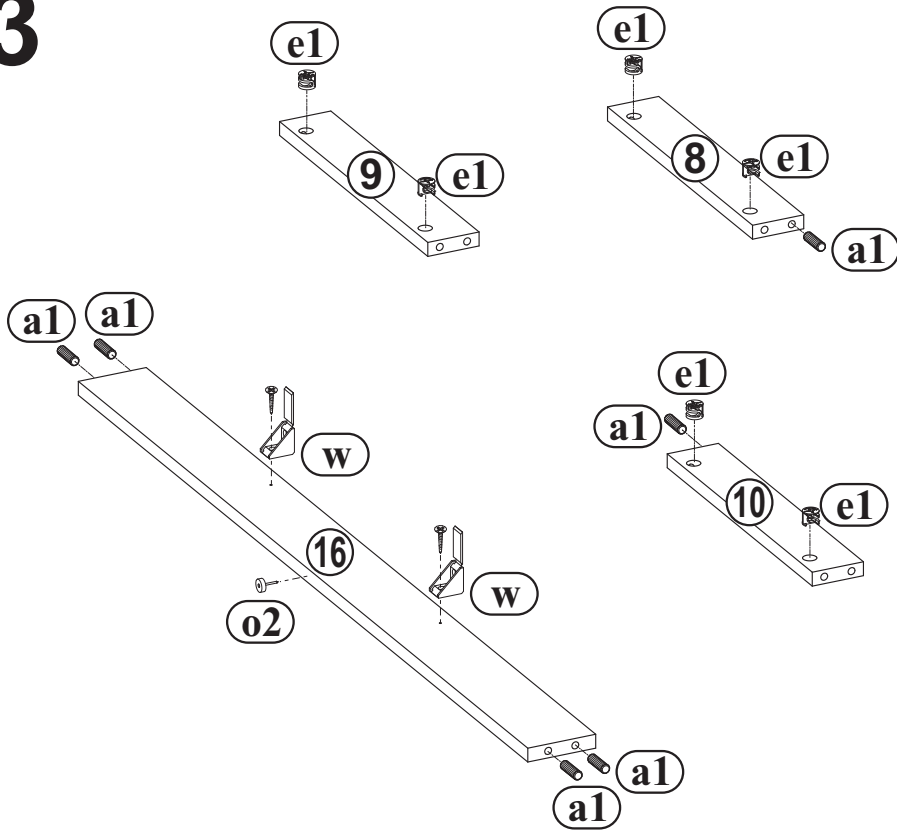








4

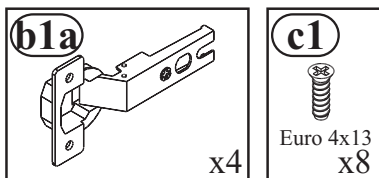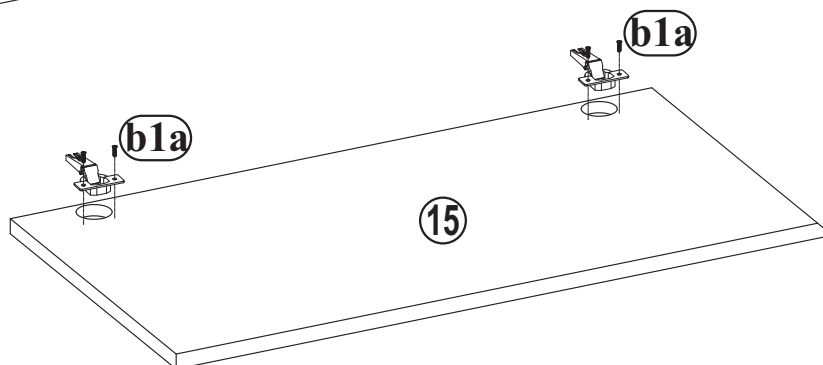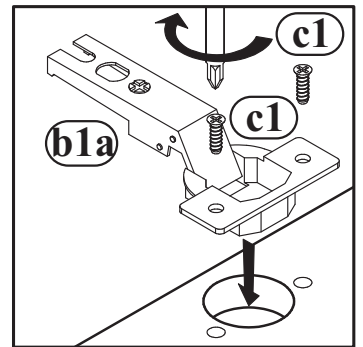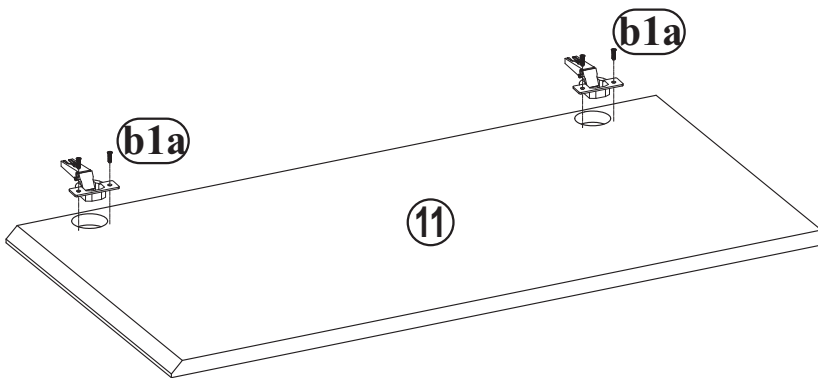


5

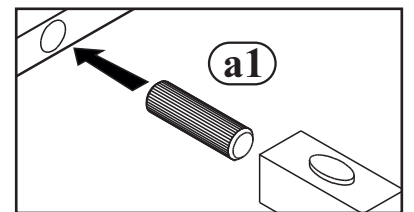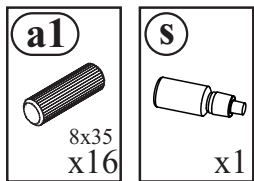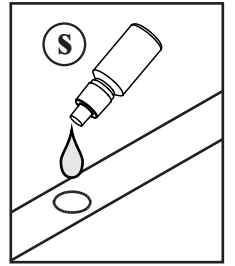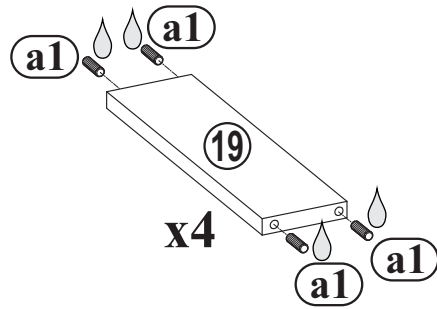


6

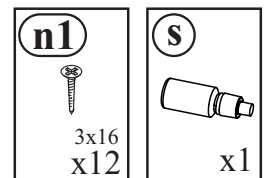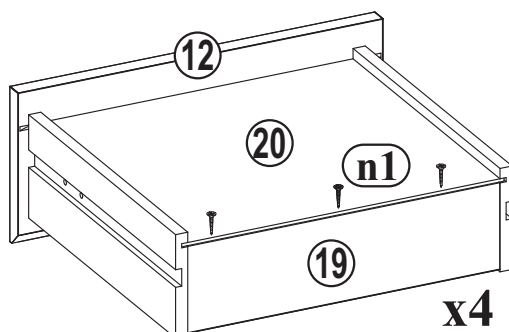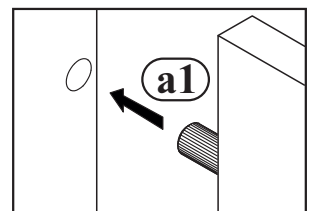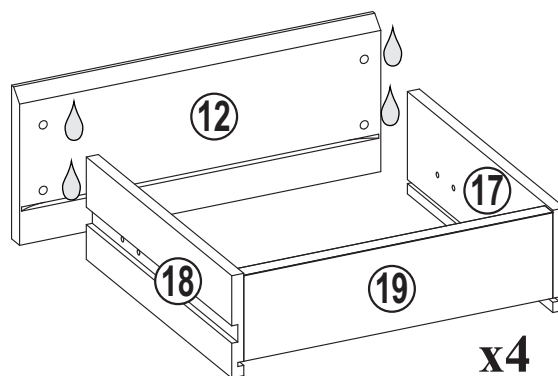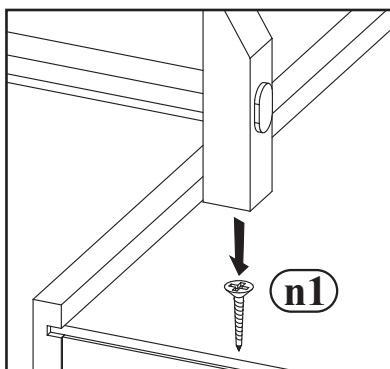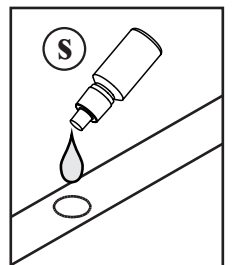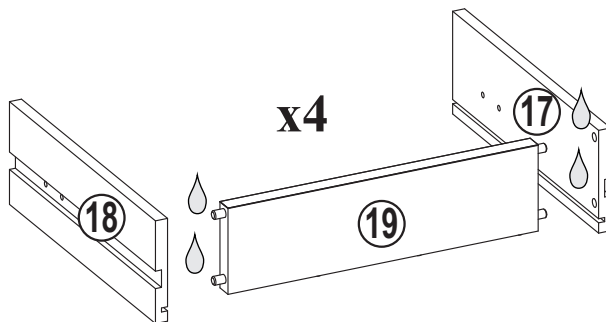








7

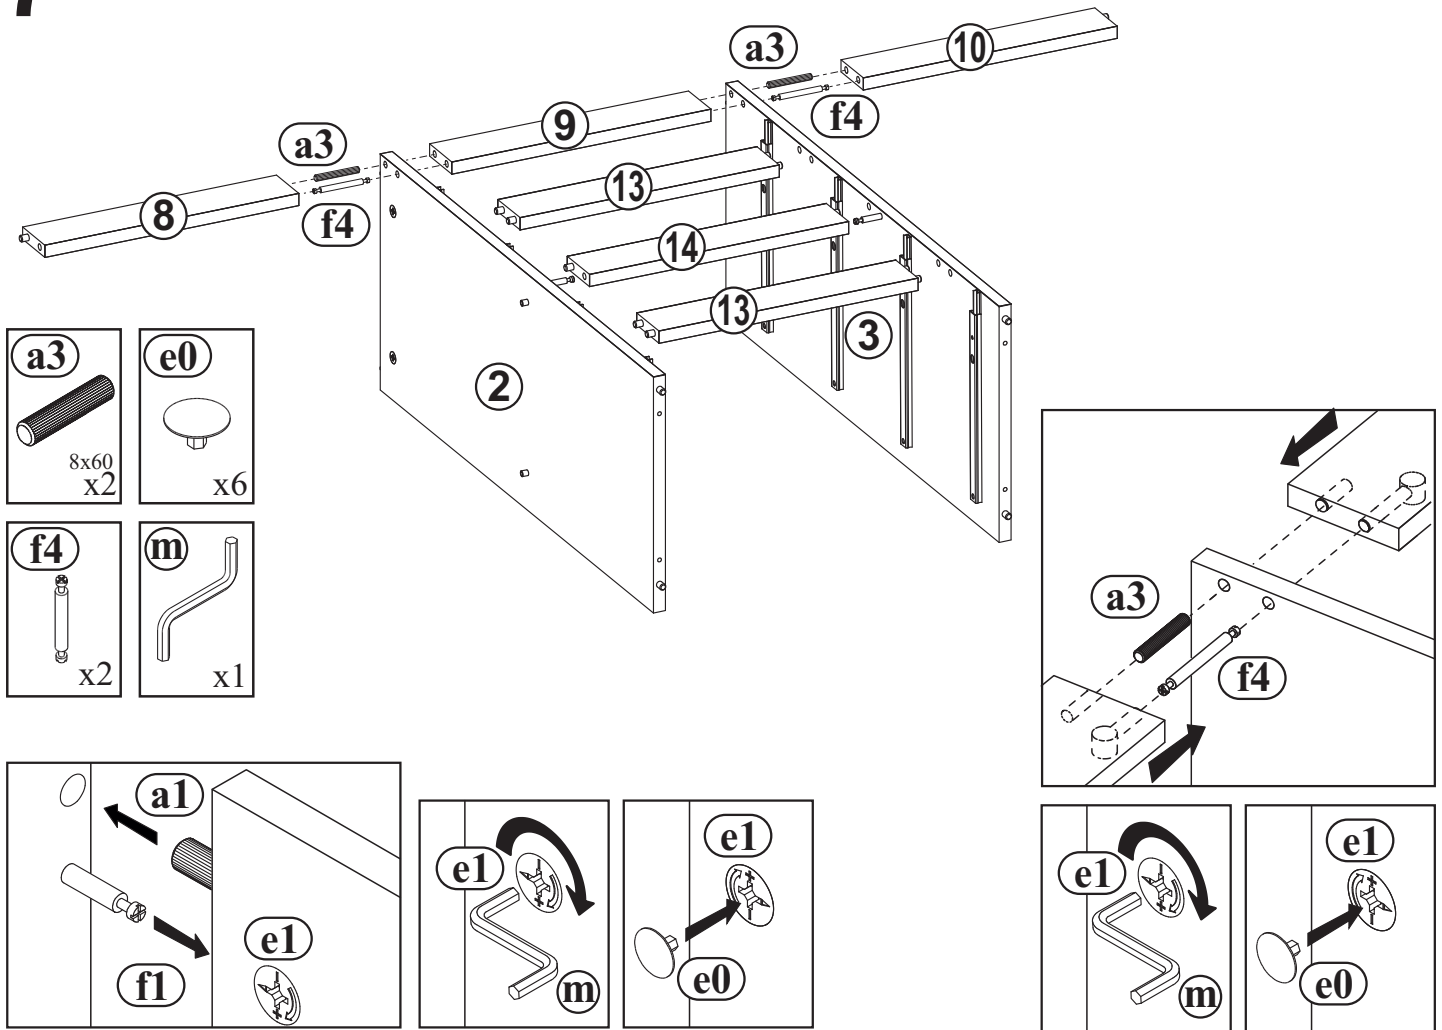






8

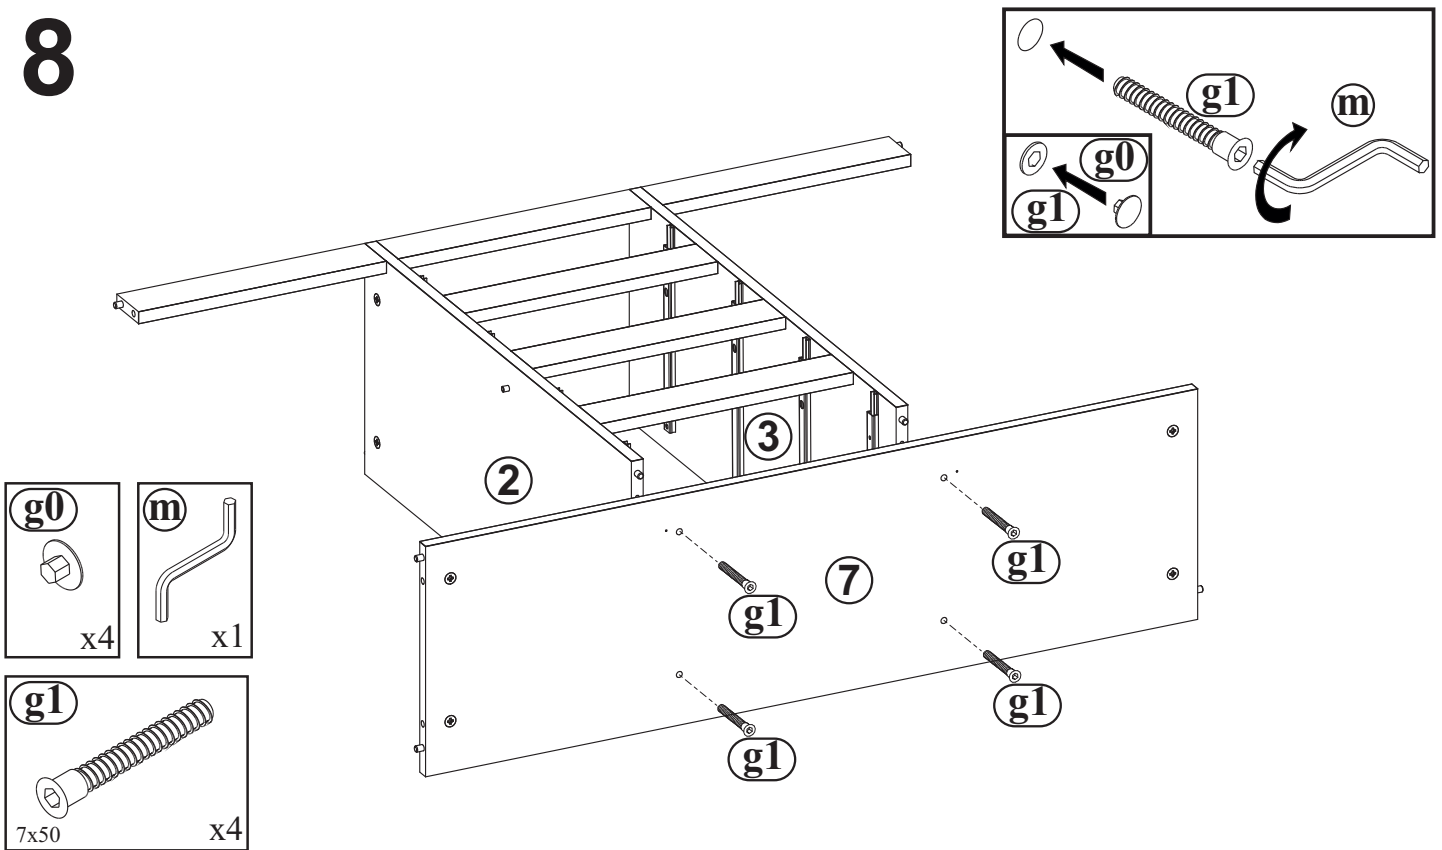








9

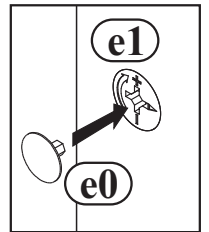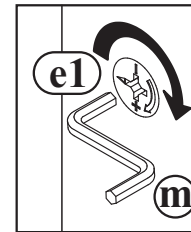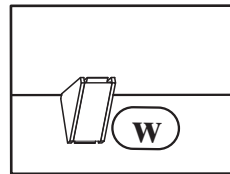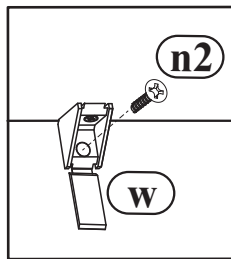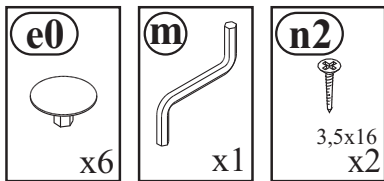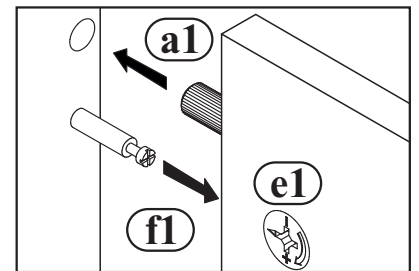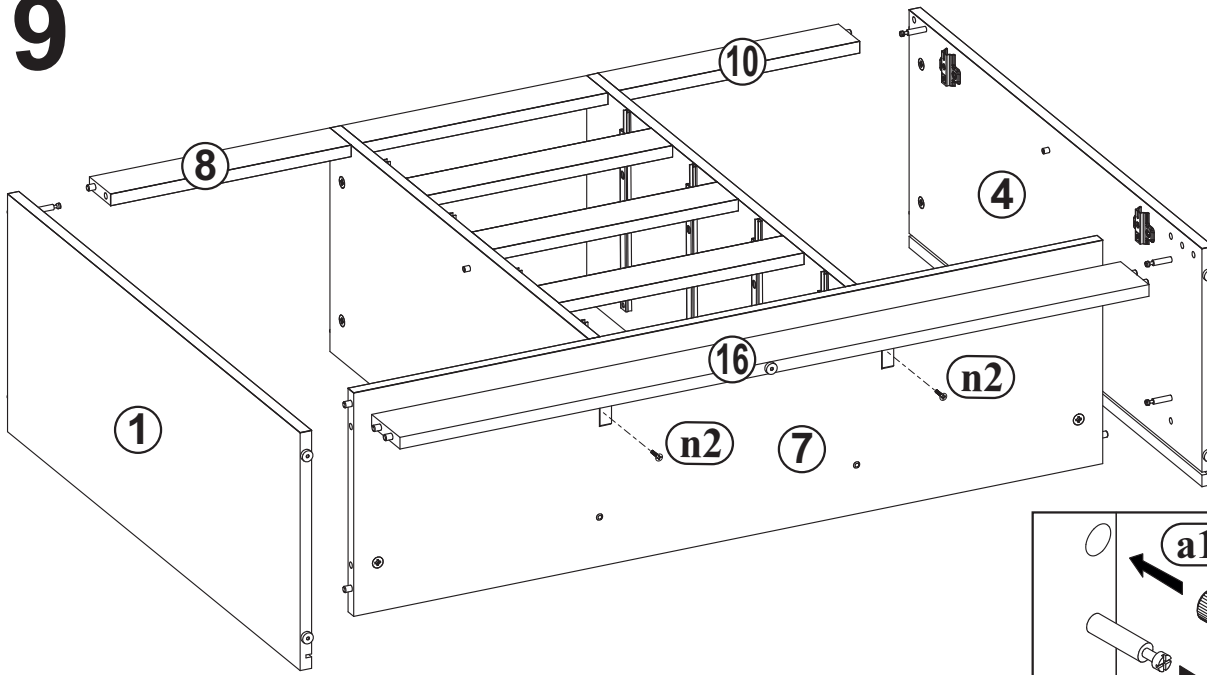





10

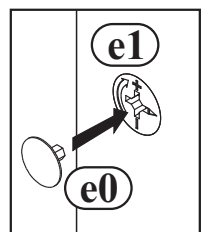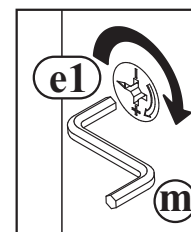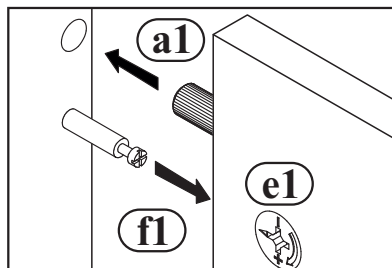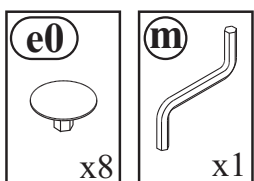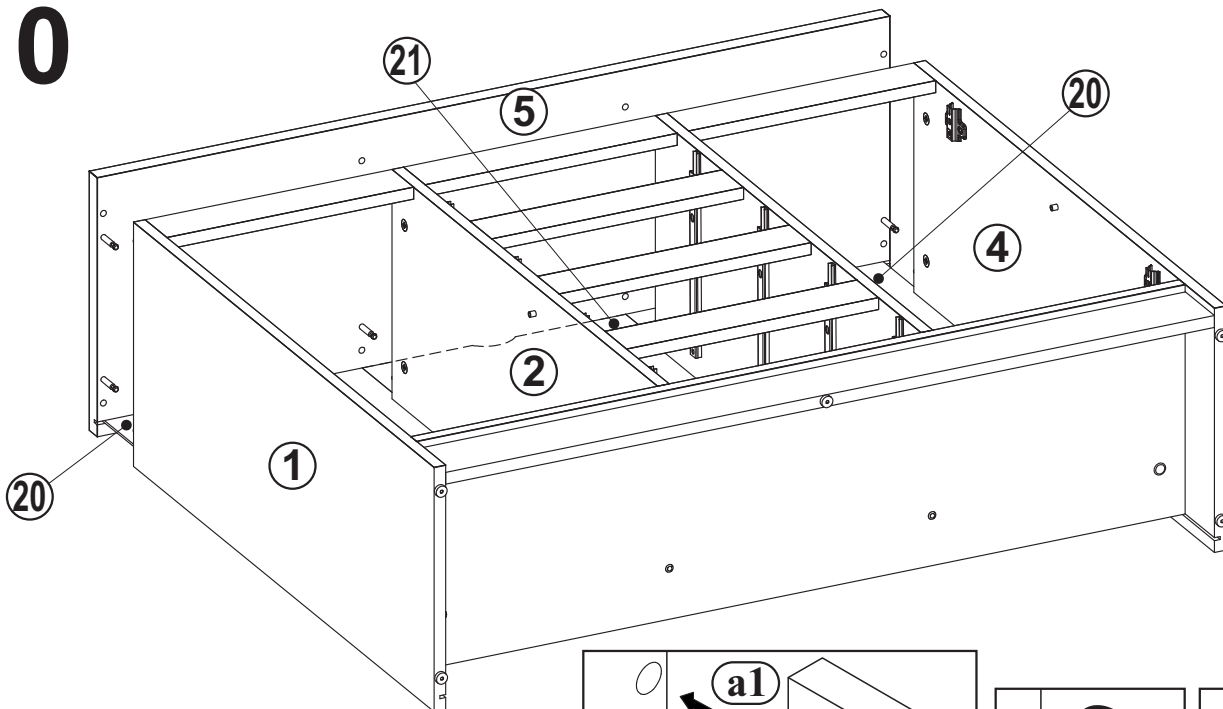

11

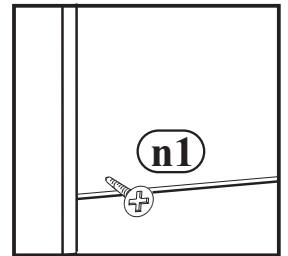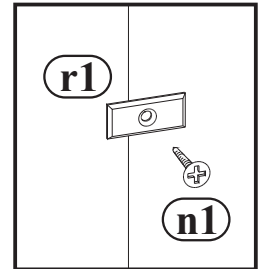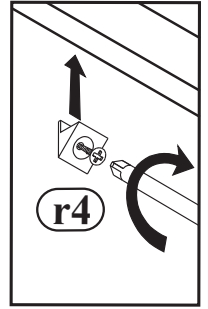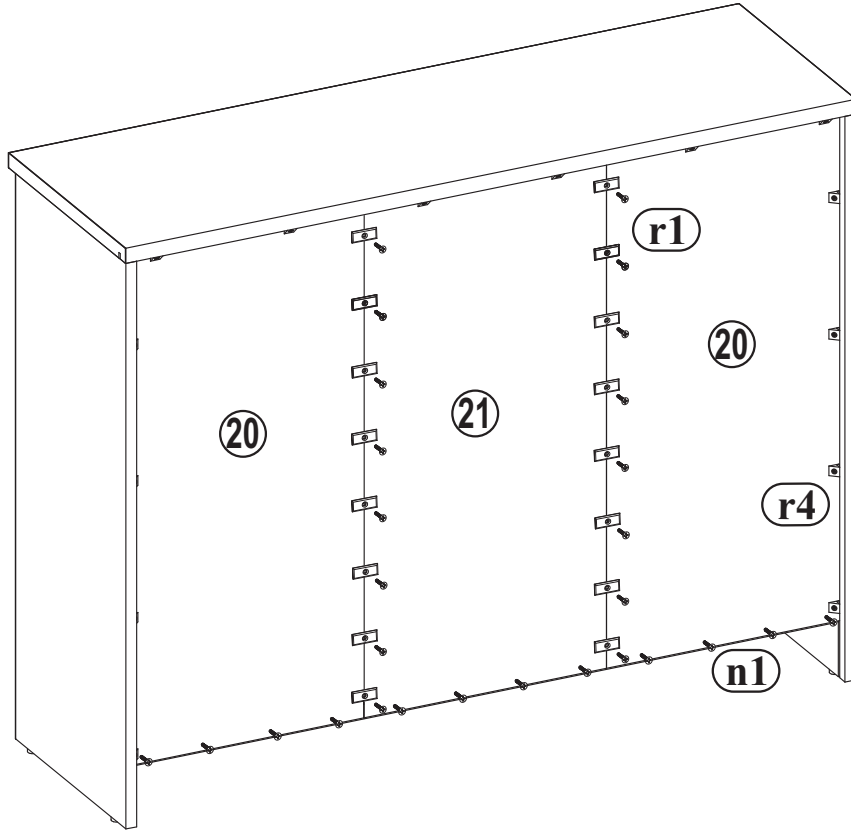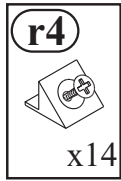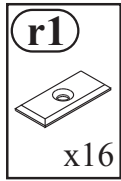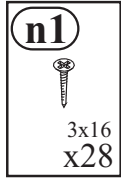

12

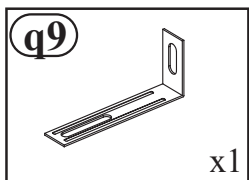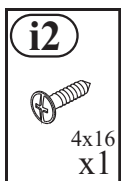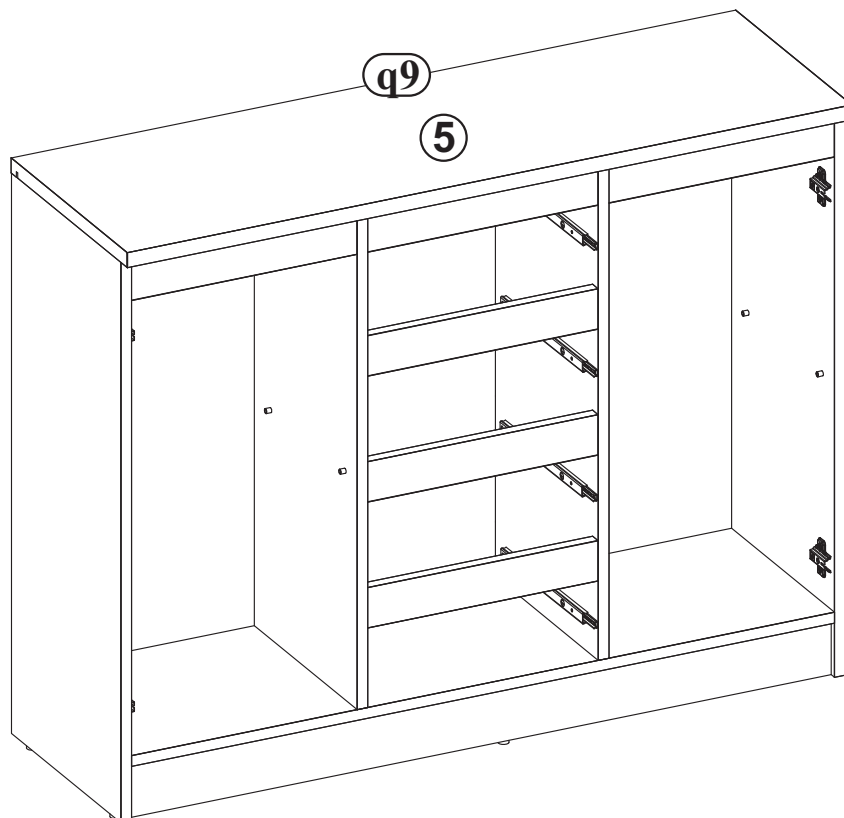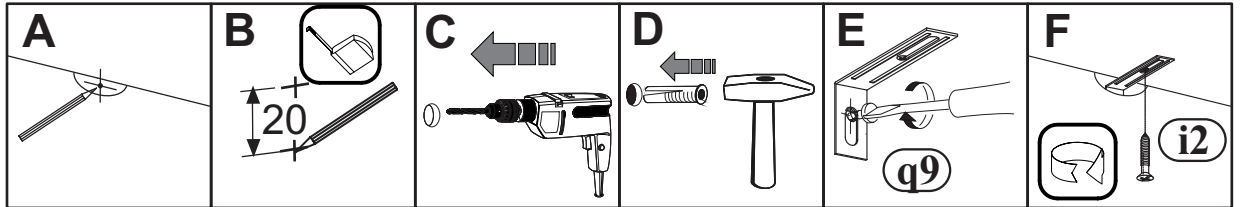

13

